

H9A17/19 Cabinet

Installation/Owner's Guide

Order Number: EK-H9A17-IN. A01

February 1996

Digital Equipment Corporation makes no representations that the use of its products in the manner described in this publication will not infringe on existing or future patent rights, nor do the descriptions contained in this publication imply the granting of licenses to make, use, or sell equipment or software in accordance with the description.

Restricted Rights: Use, duplication, or disclosure by the U.S. Government is subject to restrictions set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

© Digital Equipment Corporation 1996. All Rights Reserved.

Printed in U.S.A.

The postpaid Reader's Comments form at the end of this document requests your critical evaluation to assist in preparing future documentation.

The following are trademarks of Digital Equipment Corporation: Digital, VAX DOCUMENT, and the DIGITAL logo.

All other trademarks and registered trademarks are the property of their respective holders.

S3122

Contents

Preface	v
1 Introduction	
1.1 Description	1-1
1.2 Specifications	1-6
2 Installation	
2.1 Introduction	2-1
2.2 Tools Required	2-1
2.3 Site Planning	2-1
2.4 Unpacking	2-3
2.5 Installation Procedures	2-9
2.5.1 Removing and Replacing the Side Panels	2-10
2.5.2 Removing and Replacing the Front Filler Panels	2-12
2.5.3 Adjusting the Stabilizer Bars	2-14
2.5.4 Removing and Replacing the Power Distribution Unit	2-16
A Field Replaceable Units (FRUs)	
Figures	
1-1 Standard Depth H9A17/19 Cabinet	1-4
1-2 Extended Depth H9A17/19 Cabinet	1-5
2-1 Unpacking the Cabinet	2-4
2-2 Installing the Ramps	2-6
2-3 Deskidding the Cabinet	2-8
2-4 Removing and Replacing the Side Panels	2-11
2-5 Removing and Replacing the Front Filler Panels	2-13

2-6	Pulling Out and Adjusting the Stabilizer Bars	2-15
2-7	Removing a Power Distribution Unit	2-17

Tables

1-1	H7600-CB Power Cord Part Numbers	1-3
A-1	Field Replaceable Units (FRUs)	A-1

Preface

Overview

This guide provides the information necessary to install the H9A17 and H9A19 Cabinets. This guide *does not* provide information concerning systems that can be installed in the cabinets. For information concerning systems installed in the cabinets, refer to the respective documentation shipped with the system.

Intended Audience

The instructions in this guide are for Digital Customer Service representatives and customer maintenance personnel who are familiar with computer hardware and operating systems. Personnel should be experienced and trained in installing computer and related equipment.

How to Use This Guide

Read all of this guide before installing the H9A17 or H9A19 Cabinet. As mentioned earlier, for information concerning systems installed in the cabinets, refer to the respective documentation shipped with the system.

Before installation, review the warranty. The terms of the warranty agreement with Digital may require that a qualified Digital Customer Service representative install the system. Contact your local Digital representative if you have any questions.

Organization

This guide is organized as follows:

Chapter 1, Introduction – Provides an overview of the H9A17 and H9A19 Cabinet features and specifications.

Chapter 2, Installation – Provides site preparation, unpacking, and installation information.

Appendix A, Field Replaceable Units (FRUs) – Provides a list of the field replaceable units (FRUs) for the H9A17 and H9A19 Cabinets.

Conventions

This guide uses the following conventions:

Convention	Meaning
Note	A note calls the reader's attention to any item of information that may be of special importance.
Caution	A caution contains information essential to avoid damage to the equipment.
Warning	A warning contains information essential to the safety of personnel.

Safety Symbol

The following symbol appears on the power distribution unit. Please review its definition below:



This Dangerous Voltage warning symbol indicates a risk of electric shock and indicates hazards from dangerous voltage.

1

Introduction

1.1 Description

The H9A17 and H9A19 Cabinets (Figure 1–1 and Figure 1–2) are low-cost, computer-equipment enclosure systems that meet the Electronic Industries Association (EIA) standard 310C and the International Electrotechnical Commission (IEC) 297 standards and can accommodate fixed or slide-mounted chassis that fit into a standard 60.96-cm (24-in.) rack.

Depending on the model ordered, the cabinets may have the following factory-installed features:

- Equipment mounting rails with the EIA universal rail-hole pattern
- Front trim kit that provides a finished look to the front opening of the cabinet. The standard depth cabinet for both versions is shown in Figure 1–1 and the extended depth cabinet for both versions is shown in Figure 1–2.
- Rear doors with key locks
- A collar assembly that extends the rear of the cabinet 18.75 cm (7.38 in.)

Other cabinet features include the following:

- Vented top cover — This aids in the ventilation of the system.
- Hinged vented rear door — This provides additional ventilation and controlled access to the rear of the cabinet.
- Four nonlocking casters — These facilitate the placement of the cabinet. The front two casters swivel. The rear two casters are fixed.
- Adjustable leveling feet — These are used to stabilize and secure the cabinet at the installation site.
- Stabilizer bars — These are used to provide cabinet stability when installing or sliding equipment out of the cabinet.

Introduction

- Two single-phase H7600-AA (100-120 Vac) or H7600-AB/BB/CB/DB (220-240 Vac) power distribution units (PDUs) — Each H7600-AA/AB/BB PDU provides ten (10) ac outlets, an attached power cord, an on/off circuit breaker, and a power-on light. Each H7600-CB/DB PDU provides twelve (12) IEC 320 ac outlets, an on/off circuit breaker, and a power-on light. The H7600-CB PDU has an ac input receptacle for a detachable power cord, while the H7600-DB PDU has an attached power cord.

Note

The H7600-BB/DB PDUs are not intended or approved for use in North America.

Warning

The H7600-CB PDU is approved only for low-leakage applications. The total ground current is not to exceed 3.5 mA.

- Two power cords — Depending on the power distribution units shipped in the cabinet, the two power cords from the power distribution units have either L5-30P plugs for 100-120 Vac (H7600-AA) operation, L6-20P plugs for 220-240 Vac (H7600-AB) operation, or IEC 309 plugs for 220-240 Vac (H7600-BB/DB) operation. The 220-240 Vac H7600-CB PDU has an IEC 320-C20 power receptacle that accommodates a detachable power cord. If the plugs are not compatible to your power-source receptacle, contact your Digital Customer Service office for assistance.

For a list of the power cords available for the H7600-CB PDU, refer to Table 1-1.

Introduction


Table 1–1 H7600-CB Power Cord Part Numbers

Country	Part Number
U.S., Canada, Japan	BN18X-4E
Australia, New Zealand	BN18D-4E
Central Europe ¹	BN25T-4E
UK, Ireland	BN18B-4E
Switzerland	BN27G-2E
Denmark	BN27K-2E
Italy	BN18E-4E
India, South Africa	BN22V-4E
Israel	BN27N-2E

¹Central Europe includes Austria, Algeria, Belgium, Finland, France, Germany, Netherlands, Norway, Portugal, Spain, and Sweden.

Introduction


Figure 1-1 Standard Depth H9A17/19 Cabinet

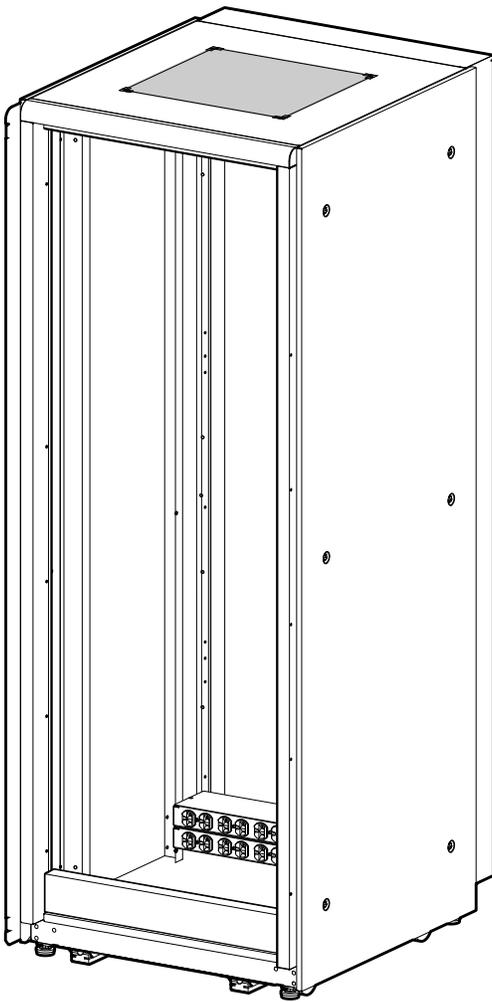

LJ-04851-T10

Introduction

Figure 1-2 Extended Depth H9A17/19 Cabinet

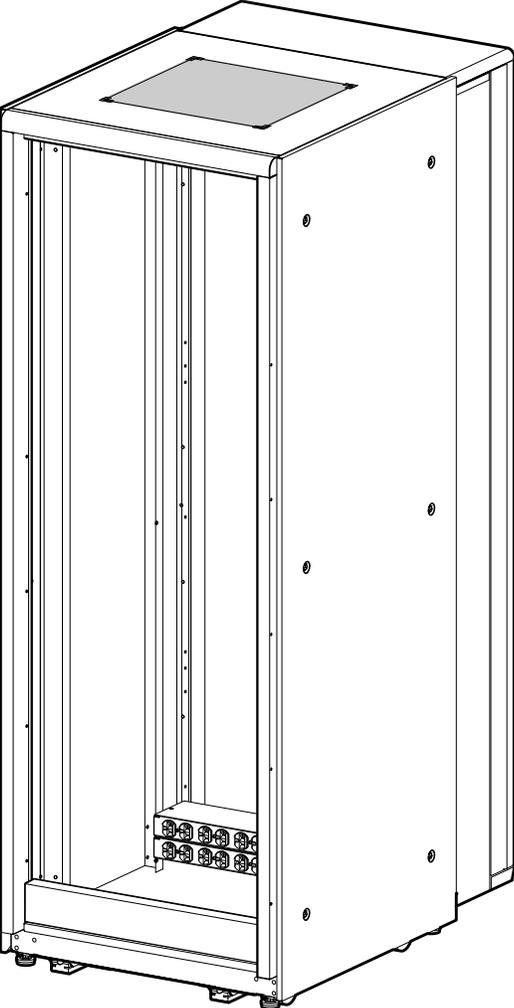

LJ-04852-T10

Introduction

1.2 Specifications

Specifications for the H9A17 and H9A19 Cabinets are as follows:

Physical

Height, overall	199.9 cm (78.7 in.) (H9A17) 169.9 cm (66.9 in.) (H9A19)
Width, overall	72.64 cm (28.6 in.)
Depth, overall	79.6 cm (31.34 in.) (Standard depth) 94.8 cm (37.34 in.) (Extended depth)
Maximum vertical rackmounting space	182.3 cm (71.75 in.) (H9A17) 151.13 cm (59.5 in.) (H9A19)
Maximum vertical rackmounting space (with power distribution units installed)	173.4 cm (68.25 in.) (H9A17) 142.24 cm (56.0 in.) (H9A19)
Horizontal rack width	Standard 60.96-cm (24-in.)
Weight	
- Standard depth H9A17 cabinet with two power distribution units	123.83 kg (273 lb)
- Standard depth H9A17 cabinet with two power distribution units plus packing material	180.98 kg (399 lb)
- Fully configured (filled) standard depth H9A17 cabinet	Up to 577.43 kg (1,273 lb)
- Fully configured (filled) standard depth H9A17 cabinet plus packing material	Up to 634.58 kg (1,399 lb)
- Extended depth H9A17 cabinet with two power distribution units	137.44 kg (303 lb)
- Extended depth H9A17 cabinet with two power distribution units plus packing material	194.59 kg (429 lb)
- Fully configured (filled) extended depth H9A17 cabinet	Up to 591.04 kg (1,303 lb)
- Fully configured (filled) extended depth H9A17 cabinet plus packing material	Up to 648.19 kg (1,429 lb)
- Standard depth H9A19 cabinet with two power distribution units	109.31 kg (241 lb)
- Standard depth H9A19 cabinet with two power distribution units plus packing material	169.64 kg (374 lb)
- Fully configured (filled) standard depth H9A19 cabinet	Up to 562.91 kg (1,241 lb)
- Fully configured (filled) standard depth H9A19 cabinet plus packing material	Up to 623.24 kg (1,374 lb)

Introduction

- Extended depth H9A19 cabinet with two power distribution units	121.11 kg (267 lb)
- Extended depth H9A19 cabinet with two power distribution units plus packing material	181.44 kg (400 lb)
- Fully configured (filled) extended depth H9A19 cabinet	Up to 574.71 kg (1,267 lb)
- Fully configured (filled) extended depth H9A19 cabinet plus packing material	Up to 635.04 kg (1,400 lb)
Casters, swivel, nonlocking:	
Diameter:	7.62 cm (3 in.)
Maximum capacity:	225 kg (500 lb)
Casters, fixed, nonlocking:	
Diameter:	7.62 cm (3 in.)
Maximum capacity:	225 kg (500 lb)
Enclosure finish	Painted
Electrical	
AC input voltage for H7600-AA PDU	100 to 120 Vac, single-phase, 3-wire
AC input voltage for H7600-AB/BB/DB PDU	220 to 240 Vac, single-phase, 3-wire
AC input voltage for H7600-CB PDU	200 to 240 Vac, single-phase, 3-wire
AC load	24 A per H7600-AA PDU 16 A per H7600-AB/BB/CB/DB PDU
Input line frequency range	47 to 63 Hz
Input power at full load	2.88 kVA per H7600-AA PDU 3.84 kVA per H7600-AB/BB/CB/DB PDU
Power cords (attached)	H7600-AA - Two (2), 120 Vac with L5-30P plugs H7600-AB - Two (2), 240 Vac with L6-20P plugs H7600-BB/DB - Two (2), 240 Vac with IEC 309 plugs
Detached power cords (H7600-CB)	See Table 1-1

2

Installation

2.1 Introduction

This chapter provides the following information:

- Tools Required (Section 2.2)
- Site Planning (Section 2.3)
- Unpacking (Section 2.4)
- Installation Procedures (Section 2.5)

2.2 Tools Required

The tools needed to install the H9A17 or H9A19 Cabinet are:

- Utility knife
- Phillips screwdriver
- 5/8-inch box wrench or adjustable wrench

2.3 Site Planning

The cabinet requires a space of 72.64 cm (28.6 in.) by 94.8 cm (37.34 in.) maximum, depending on the cabinet model. In addition, the cabinet requires a clearance of 91.44 cm (36.0 in.) at both the front and rear of the cabinet for service. This may be greater depending on the distance that a system may be slid out of the cabinet.

Installation

Warning

High Leakage Current — An insulated earthing conductor that is identical in size, insulation material, and thickness to the earthed and unearthed branch-circuit supply conductors (except that it is green with or without one or more yellow stripes) is to be installed as part of the branch circuit that supplies the unit or system. The earthing conductor described is to be connected to earth at the service equipment or, if supplied by a separately derived system, at the supply transformer or motor-generator set.

The attachment-plug receptacles in the vicinity of the unit or system are all to be of an earthing type, and the earthing conductors serving these receptacles are to be connected to earth at the service equipment.

Warning

Use sufficient personnel when unloading the cabinet from the pallet or moving the cabinet to a new location. Depending on the model ordered, the cabinet weighs from 109.31 kg (241 lb) to 137.44 kg (303 lb) empty, and can weigh from 562.91 kg (1,241 lb) up to 591.04 kg (1,303 lb) fully configured.

For site preparation details concerning the system devices installed or the systems to be installed in the cabinet, refer to the documentation for those systems.

2.4 Unpacking

The cabinet is shipped on a wooden pallet. Proceed as follows to unpack the cabinet:

1. Position the pallet with the cabinet in an area that provides sufficient workspace for unpacking. Ensure that there is sufficient clearance in front of the pallet (marked with a large F) to roll the cabinet down the ramps.
2. Refer to Figure 2-1. Cut and remove the plastic wrapping ❶ that secures the corner posts ❷ and the carton ❸ to the cabinet. The carton contains the two ramps.
3. Remove the corner posts ❷ and the carton ❸ from the pallet ❹.

Caution

In the next step, take care not to damage the cabinet finish when removing the shrinkwrap.


4. Remove the plastic bag ❺ covering the cabinet.
5. Check the cabinet and the associated equipment for any external damage. Report any damage to Digital Customer Service or a Digital sales office and to the responsible freight carrier.

Note

Keep all packing material and receipts in case a damage claim is filed.

Installation

Figure 2-1 Unpacking the Cabinet

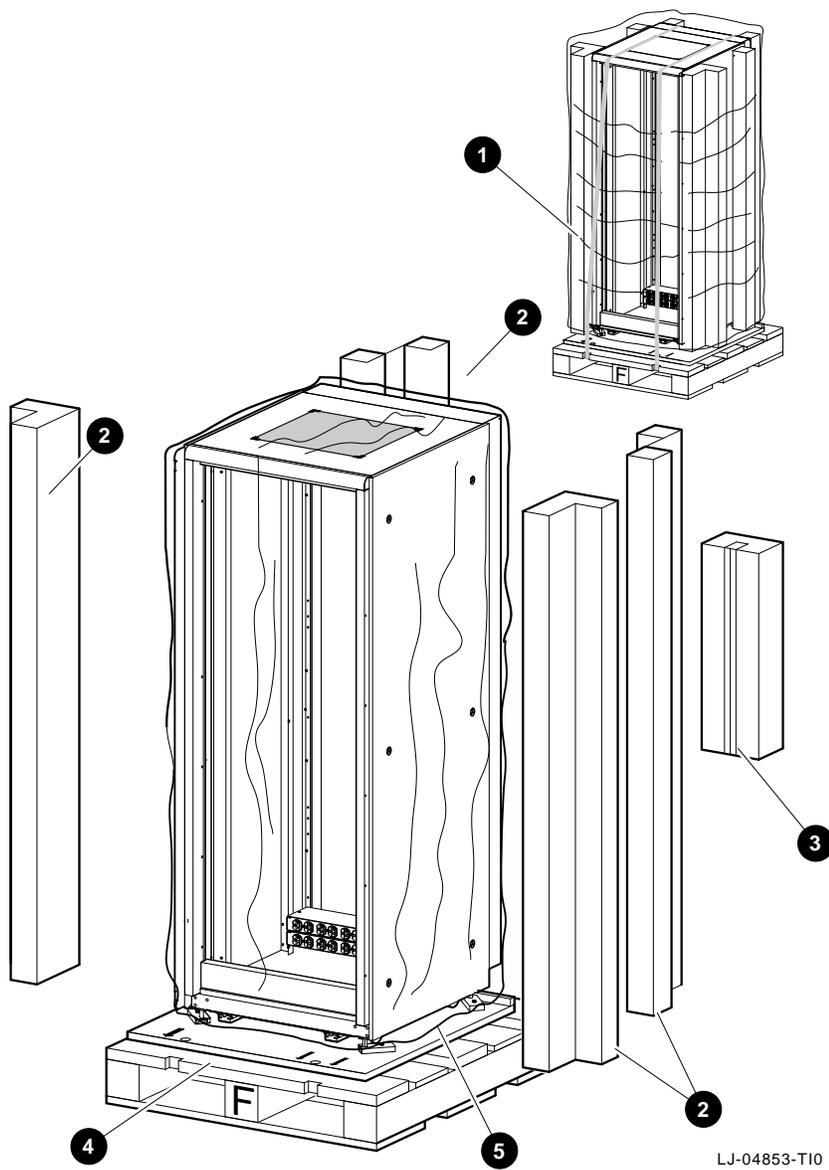

Installation

6. Refer to Figure 2-2. Remove the four shipping bolts ⑥ and brackets ⑦ that secure the four cabinet leveler feet ③ to the pallet ④.

Note

The ramps attach to the front of the pallet. Therefore, the cabinet will have to be rolled frontwards down the ramps.

7. Remove the ramps ⑨ from the shipping carton and set the ramps in the holes ⑩ provided at the front of the pallet ④. Ensure that the arrows ⑪ on the ramps match the pallet arrows ⑫ as shown in Figure 2-2.


Caution

In the next step, the leveler feet *must* be fully retracted to prevent contact with the ramp or the floor when the cabinet is unloaded from the pallet.

8. Adjust the four cabinet leveler feet ⑧ and the leveler feet on the stabilizer bars ⑬ to the maximum upward position.

Installation

Figure 2-2 Installing the Ramps

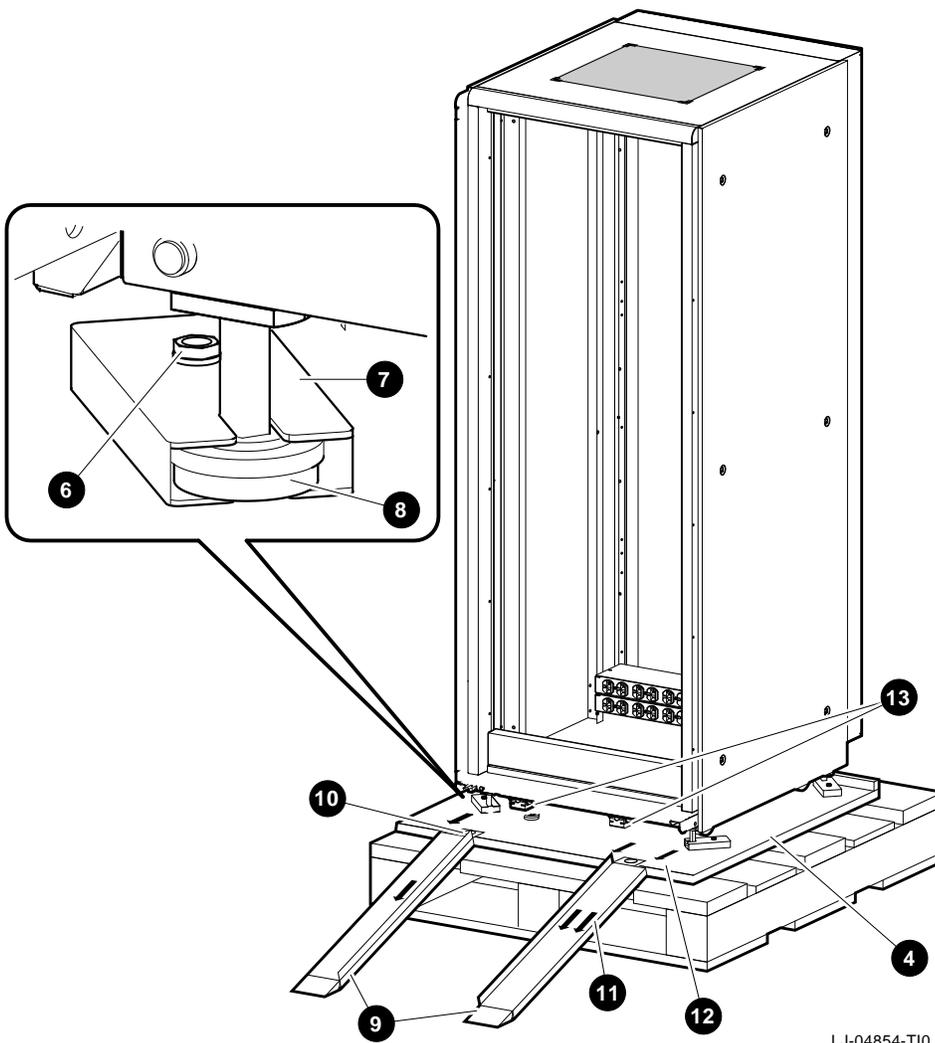

Installation

Warning

In the following step, use sufficient personnel to move the cabinet off the pallet. Depending on the model ordered, the cabinet weighs from 109.31 kg (241 lb) to 137.44 kg (303 lb) empty, and can weigh from 562.91 kg (1,241 lb) up to 591.04 kg (1,303 lb) fully configured.

If equipment is installed in the cabinet, the cabinet may become top heavy and could accelerate rapidly down the ramps if not restrained. Be prepared to guide and control the motion of the cabinet.


9. Refer to Figure 2-3 and roll the cabinet down the ramps using sufficient personnel for safety.
10. Wheel the cabinet to the desired location.
11. Adjust the leveler feet downward so that the cabinet is level and the load is removed from the casters.

Caution

Ensure that the leveler feet extend enough to carry the load of the cabinet so that the casters spin freely. If not, damage to the casters will result over an extended period of time.

Installation

Figure 2-3 Deskidding the Cabinet

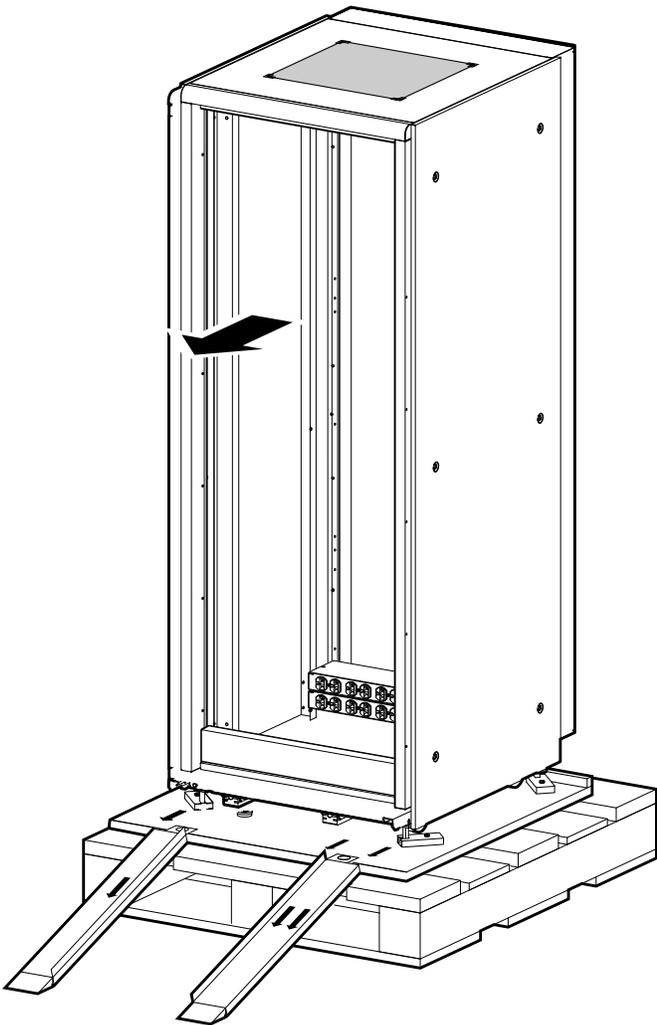

LJ-04855-T10

2.5 Installation Procedures

During the installation of the cabinet, one or more of the following procedures may be needed:

- Removing and Replacing the Side Panels (Section 2.5.1)
- Removing and Replacing the Front Filler Panels (Section 2.5.2)
- Adjusting the Stabilizer Bars (Section 2.5.3)
- Removing and Replacing the Power Distribution Unit (Section 2.5.4)

Installation

2.5.1 Removing and Replacing the Side Panels

The side panels on the H9A17/19 cabinets are removable.

Note

If the side panels are removed, replace them before powering up any equipment.

To remove the side panels, refer to Figure 2–4 and proceed as follows:

Removal


1. Remove the six M5 Phillips-head machine screws ❶ securing the side panel to the cabinet frame.
2. Grasp both sides of the side panel and lift the side panel away from the cabinet frame.
3. Place the side panel aside and out of the way.

Replacement

To replace the side panel, reverse the removal procedure, steps 1 through 3.

Installation

Figure 2-4 Removing and Replacing the Side Panels

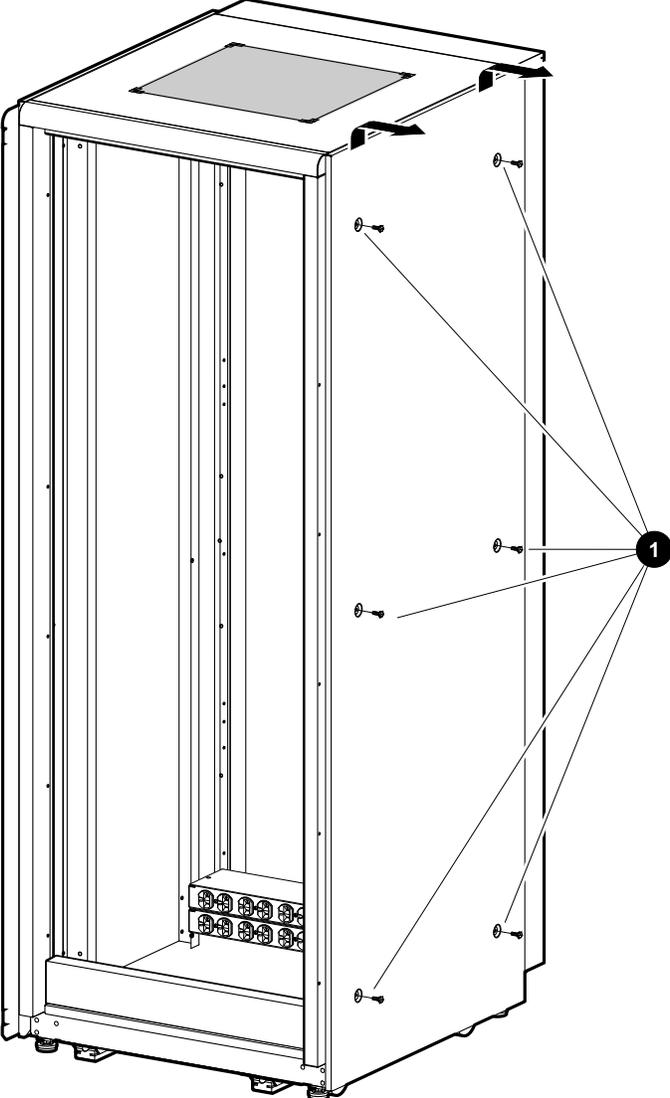

LJ-04856-T10

Installation

2.5.2 Removing and Replacing the Front Filler Panels

To remove a front filler panel, refer to Figure 2-5 and proceed as follows:

Removal


Grasp the front filler panel ❶ on both sides and then pull straight back away from the cabinet.

Replacement

To replace a front filler panel ❶, align the sockets ❷ on the front filler panel (refer to the exploded view) with the appropriate ball studs ❸ on the rails ❹ and push the panel into place.

Installation

Figure 2-5 Removing and Replacing the Front Filler Panels

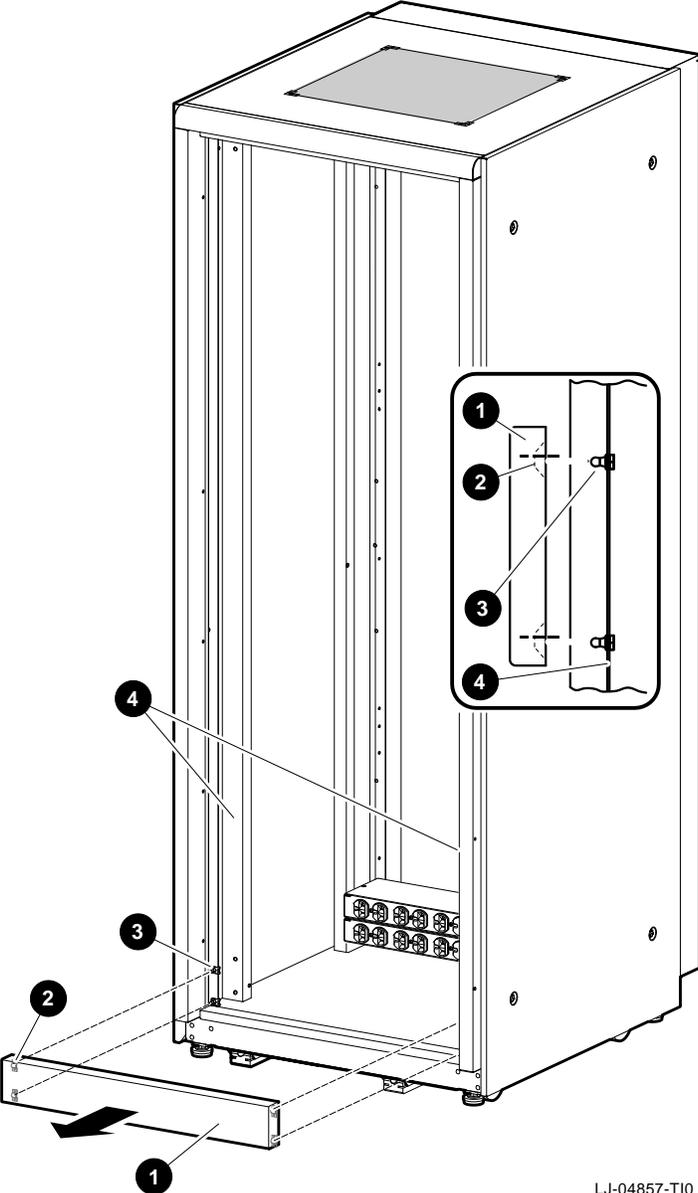

LJ-04857-T10

Installation

2.5.3 Adjusting the Stabilizer Bars

The stabilizer bars ❶ pull straight out from the bottom front of the cabinet ❷ as shown in Figure 2-6. When the stabilizer bars are fully extended, adjust the feet ❸ at the end of the stabilizer bars until they touch the floor.


Warning

The stabilizer bars must be fully extended before any system is extended out of the cabinet on its slides.

The H9A17/19 Cabinets can hold various system configurations. The amount of force required to tip or make the cabinet unstable differs with each configuration.

Installation

Figure 2-6 Pulling Out and Adjusting the Stabilizer Bars

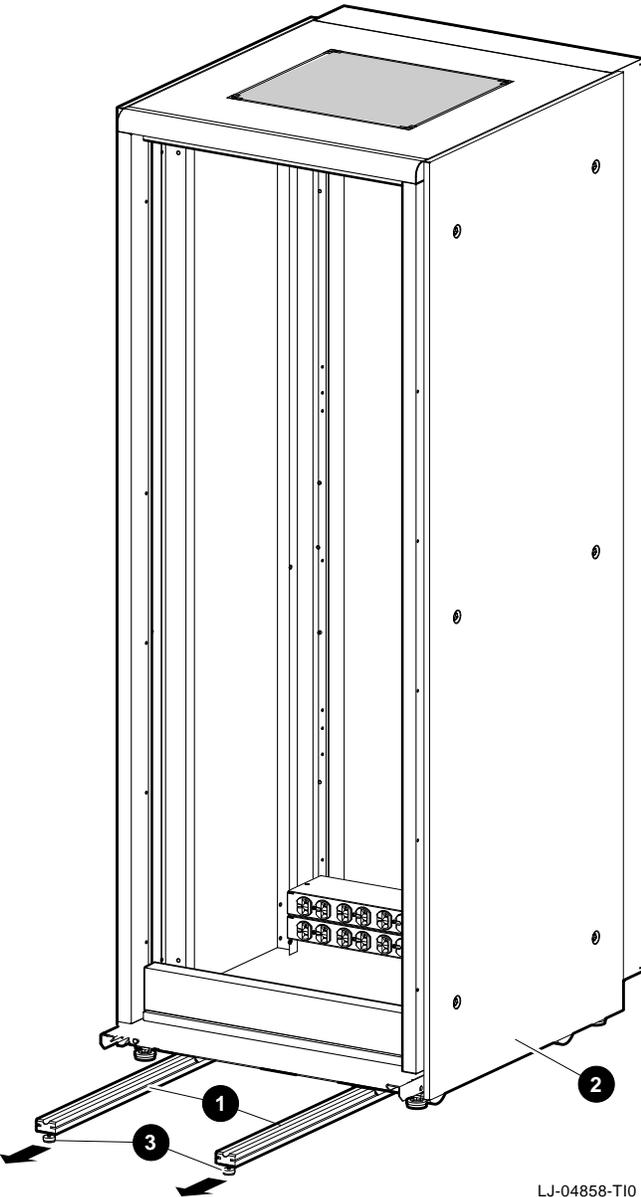

LJ-04858-T10

Installation

2.5.4 Removing and Replacing the Power Distribution Unit

Warning

There can be two or more PDUs per cabinet. Ensure that all systems installed in the cabinet are turned off as described in the system documentation before performing the following procedure.

To remove a power distribution unit, refer to Figure 2–7 and proceed as follows:

Removal


1. If the cabinet contains an operating system, turn off the system as described in the system documentation.
2. Open the rear door.
3. Set the Main Power switch ❶ on all power distribution units to the off (O) position.
4. Disconnect the power distribution units from the ac power source.
5. Remove the bottom front filler panel (refer to Section 2.5.2). This provides access to the ac outlets on the power distribution units.
6. Note and record the power cord connections to the outlets at the rear of the failed power distribution unit. Then unplug the power cords from that power distribution unit.
7. At the rear of the cabinet, remove the four (4) 10-32 truss-head screws ❷ that secure the power distribution unit to the rear rails (via the four (4) 10-32 clip nuts ❸).
8. Pull out the power distribution unit and remove it from the cabinet.
9. Remove the extension brackets ❹ from the H7600 PDU by removing the four (4) 10-32 truss-head screws ❺ that secure the extension brackets to the flanges on the PDU.
10. Remove the other four (4) 10-32 truss-head screws ❻ that secure the extension brackets to the sides of the PDU. Save both extension brackets for installation on the new PDU.

Installation

Replacement

To replace a power distribution unit, reverse the removal procedure, steps 2 through 10, then follow the power-on procedure in the system documentation.

Figure 2-7 Removing a Power Distribution Unit

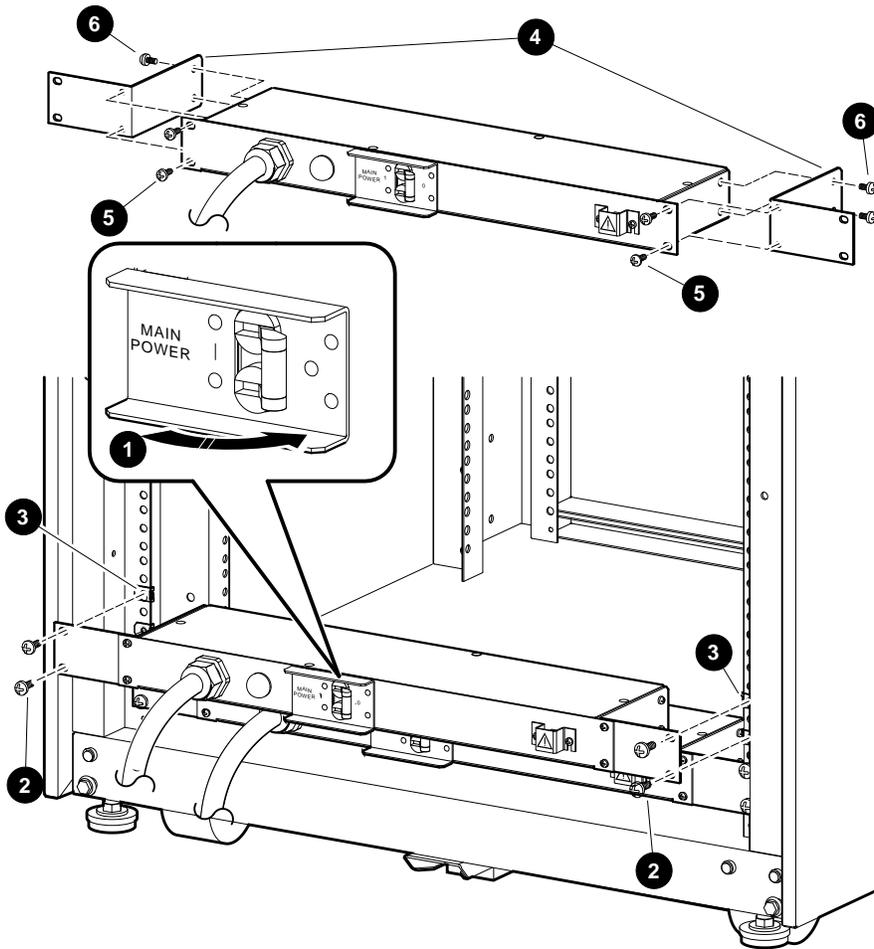

LJ-04859-T10

A

Field Replaceable Units (FRUs)

Table A-1 lists the field replaceable units (FRUs) for the H9A17/19 Cabinets.

Table A-1 Field Replaceable Units (FRUs)

Description	Part Number
Power distribution unit, 100 to 120 Vac	H7600-AA
Power distribution unit, 220 to 240 Vac	H7600-AB
Power distribution unit, 220 to 240 Vac	H7600-BB
Power distribution unit, 220 to 240 Vac	H7600-CB
Power distribution unit, 220 to 240 Vac	H7600-DB

Reader's Comments

H9A17/19 Cabinet
Installation/Owner's Guide
EK-H9A17-IN. A01

Your comments and suggestions help us improve the quality of our publications.

Thank you for your assistance.

I rate this manual's:	Excellent	Good	Fair	Poor
Accuracy (product works as manual says)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Completeness (enough information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Clarity (easy to understand)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Organization (structure of subject matter)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Figures (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Examples (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Index (ability to find topic)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Page layout (easy to find information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

I would like to see more/less _____

What I like best about this manual is _____

What I like least about this manual is _____

I found the following errors in this manual:

Page	Description
_____	_____
_____	_____
_____	_____

Additional comments or suggestions to improve this manual:

For software manuals, please indicate which version of the software you are using: _____

Name/Title _____ Dept. _____

 
Company _____ Date _____

Mailing Address _____


Phone _____

Do Not Tear - Fold Here and Tape

digital™



No Postage
Necessary
If Mailed
in the
United States

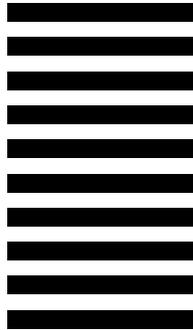

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 33 MAYNARD MASS.

POSTAGE WILL BE PAID BY ADDRESSEE

DIGITAL EQUIPMENT CORPORATION
Shared Engineering Services
DIGITAL DRIVE MK01-2/E12
PO BOX 9501
MERRIMACK, NH 03054-9982



Do Not Tear - Fold Here