


DECstation 5000
Model 2xx to DEC
3000 Model 300 AXP

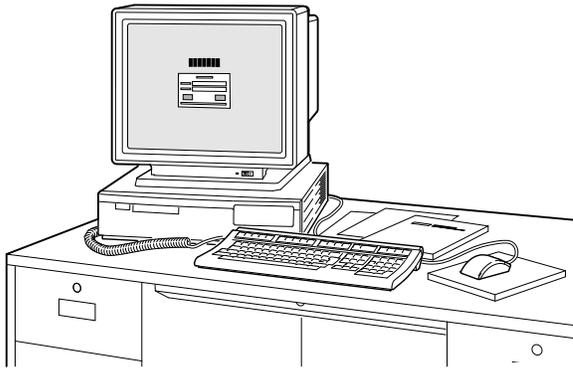

Upgrade Instructions



Order Number: EK-DS523-UP. A01

Options You Can Upgrade

	Can Upgrade	Cannot Upgrade
Graphics		
Options:**	PMAGB-BA/BB	PMAG-AA/AB
	PMAGB-BC/BD	PMAG-DA/DB
	PMAGB-JA/JB	AV10U-AA/DA
	PMAG-GB	PMAG-EA/EB
	PMAGB-BE/BF	PMAG-FA/FB
	PMAG-HA	PMAGB-ED/EC
	PMAGB-FA/FB*+	PMAGB-DC/DD
	PMAGB-EA/EB+	PMAG-CA/CB
	PMAGB-DA/DB+	PMAG-JA/JB
		PMAG-BA/BB
TURBO-channel		
Options:**	PMAD-AA/AB	
Monitors:		
	VRC16-Cx	VR262-Ax
	VRC16-Hx	VR290-Dx
	VRM17-Ax	VR297-Dx
	VRM17-Hx	VR299-Dx
	VR319-Dx**	VRT19-Dx
	VR320-Dx**	VR319-Cx
	VRT16-Hx**	VR320-Cx
	VRT19-Hx**	VRT13
		VRT16-Dx
Expansion		
Boxes:	SZ03,12,16	
	PMTcE***	

*PMTcE required for support on DEC 3000/300.

**Supported on Model 300 only.

+DEC Open3D required for software support.

Options You Can Upgrade

	Can Upgrade	Cannot Upgrade
Hard		
Disks:****	RZ24, 25, 26 RZ23L, 24L RZ55, 56, 58	RZ57
Removable		
Media:****	RRD42 TZ30 TLZ04,06 TKZ08, 09, 10* TSZ07*	RW100-AA RW100-BA RW100-CA CITCA-AA TK50Z RRD40 RX23, 26, 33
Monitors:	VR319-Dx VR320-Dx VRC16-Cx/Hx VRM17-Ax/Hx VRT16-Hx VRT19-Hx	VR262 V290 VR297 VR299 VRT13
Input		
Devices:	LK201, 401 VSX10AA/A3** VSX20AA/A3** VSX30-AA/A3** VSxxx-AA/AB VSxxx-FA/GA VSxxx-GB VSxxx-JA VSxxx-XX	LK501 VSxxx-BB

*Support planned.


**DEC Open3D required for software support.

***Minimum revision of host module required is D03.


****Available only in expansion boxes.

Check the Box Contents

System Kit:

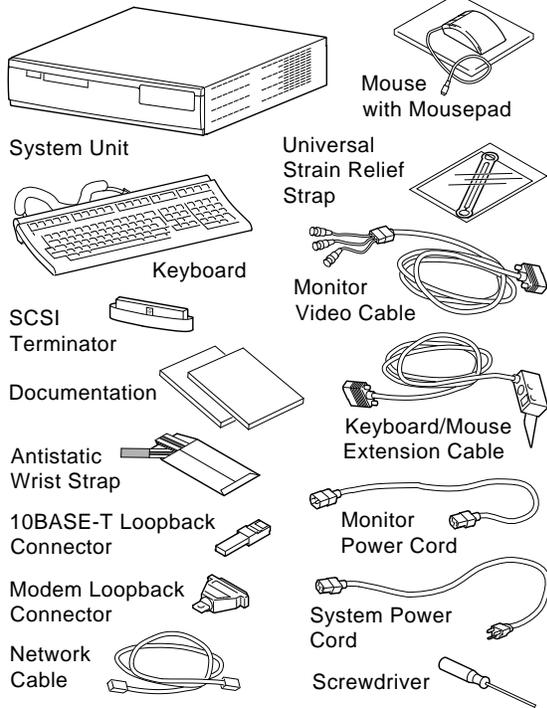


Accessory Kit:

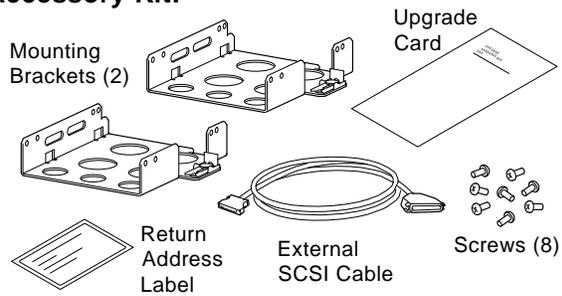

Turn Off System/Remove Cover


1. To shut down the software and put the system into console mode, enter:
`shutdown -h now`
2. Turn off the system unit by pressing **O** on the On/Off switch on the rear of the system unit. Wait 15 seconds before unplugging the power cord.
3. Unplug all cables from the system unit
4. Unscrew the captive screw. Grasp each side of the cover and pull the cover straight toward the front about 2 inches (5.5 cm). Pull the cover up and off.

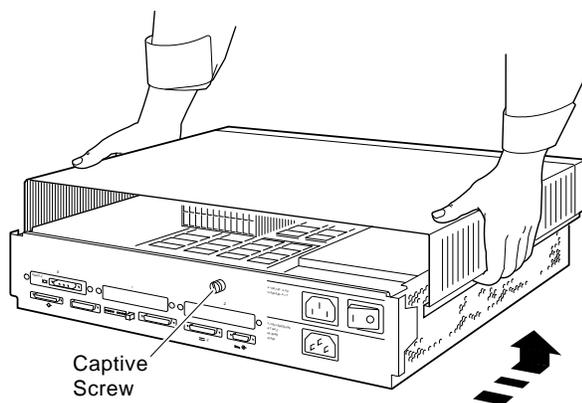

Caution: You may damage the equipment if you do not wear an antistatic wrist strap when working inside the system unit.


Remove Option Modules

Turbochannel option modules and graphics option modules can be single, double, or triple width to occupy one, two, or three option slots.

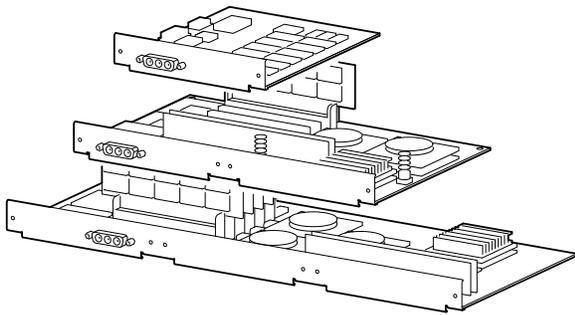

Remove Option Modules

5. Use a Phillips screwdriver to remove the option slot screws, then the support post screws.
6. Lift the front of the module to disconnect the slot connectors, then lift the back of the module.

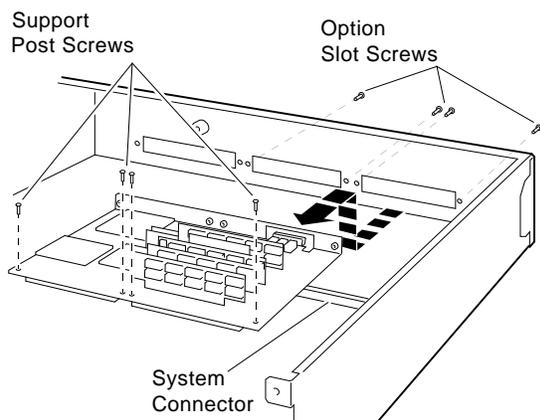

Complete the Upgrade

7. Follow the instructions in the *DEC 3000 Model 300/300L AXP Reference Guide* to install the options in your new system.
8. Follow the instructions in the *DEC 3000 Model 300/300L Setting Up Your System* card to install the system.
9. Test the installation by turning on your system and entering the `show device` command at the console prompt (`>>>`).

The options you upgraded should appear in the display. If an option does not display, it was not installed properly.

10. Return your DECstation and any devices that are not upgradeable to Digital:
 - Pack the DECstation and devices securely in packing material.
 - Attach the return-address label that was in your upgrade kit.
 - Contact your Digital service representative to upgrade your service contract.