DIGITAL FO			CO	CATEGOR [F]			EGORY F]	PAGE 1		
FIELD CHANGE ORDER						N	 NUMBER: 2R-RZREA-F001			
APPLICABILITY: This FCO is to be installed in all 2R-RZREA-AA Disk units.									Disk units.     	
				ot meet ES lem with t					. Potential   season.	
SOLUTIO	ON: Rej	place f	ront Bez	zel with r	new Be	zel whi	ch incl	udes a l	hinged door.     	
locks	closed		wo kep s	ts will ha					ont that   been reworked   	
PRE/COI	REQUIS	ITE FCO	:						MTTI HRS	
None								0.75		
TOOL/TH	EST EQI	UIPMENT	_	ar flat bl driver.	lade s	crewdri	ver. M	ledium Pl	hillips   	
				FCO PAR	RTS IN	FORMATI	ON			
FCO KIT NO.   DESCF				RIPTION OF CONTENTS				! ~	KIT VARIATION   PPLICABILITY	
FA-04925-01   FA Document			:				!	plies to all -RZREA-AA disks  		
				FCO CHARC	GING I	NFORMAT	'ION			
WARRANTY/CONTRACT   NONWARRANTY/NONCONTRACT										
ON-SITE		OFF-SITE				OFF-SITE		MATERIAL ONLY		
TRAVEL/	EQ KIT		EQ L  KIT	<del></del>		    INSTAL	EQ L KIT	!	ADMIN, HANDLING   IPPING & EQ KIT	
DEC	   DEC 	DEC	_    DEC _		   CUS 	CUS	   CUS 	-     1	DEC	
APPROVALS										
CSSE   CSHQ LO Dick Mitchell   Jean Bu				OGISTICS   urke			CS PRODUCT SAFETY   Hank Aaron			

CSSE MANAGER	This Document is published	FCO RELEASE DATE
Lee Spector	on multiple media including	3 December 1990
	Hardcopy, Customer Services	
MICROMEDIA	Microfiche Libraries,	FCO REVISION
Diane MacDonald	Customer Services CD-ROM and	A
	MDS Microfiche Libraries.	
POPULATION		PARTS AVAILABILITY
320		December, 1990

	FCO 2R-RZREA-F001
d i g i t a l	PAGE 2 OF 4

## Removal of the old Bezel:

 
- Shutdown the host systems using the procedure defined by the operating system you are running.
- Turn off the power to the host and all of its peripherals.
- If a disk canister is installed in the enclosure, remove it.
- Unplug the power cord from the enclosure.
- Unplug either the cable or the terminator from each of the SCSI connectors on the back of the enclosure.
- Turn the enclosure upside down and remove the 6 screws that hold the external section of the enclosure on.
- Remove the external section of the enclosure.
- \*\*Note\*\*It may be necessary to push the top front edge of the external enclosure up slightly while removing it.
- Remove the top of the external enclosure by sliding it back over the internal enclosure.
- While the drive is upside down, remove the 2 screws that secure the bottom of the front bezel.
- Turn the internal enclosure back over and remove the screw on the right side of the bezel and the screw on the left side of the bezel.
- Carefully remove the front bezel and carefully pull the

plastic hold down fingers off the the 10 pin ribbon cable connector. Carefully remove the connector from the momentary push button switch.

	FCO	2R-RZREA-F001
d i g i t a l	PAGE	3 OF 4
_ _ _		

## Installation of the new Bezel:

- Unpack the new front bezel.
- Connect the 10-pin ribbon cable to the new front panel. Be sure that the red stripe remains on the left side (looking at the front of the enclosure). Carefully push the locking fingers down over the back of the connector to lock it in place.
- \*\*Note\*\*It may be necessary to loosen the 2 hinge screws, but make sure to tighten them after the bezel is in place.
- Making sure that the bottom part of the hinge is on the outside of the chassis, slide the new front bezel into position.
- Install the 2 6/32 X 3/8 screws to secure the hinge plate. Install the 1 6/32 X 5/16 Flat Head Screw in each side of enclosure to secure the front bezel.
- · Double check all screw to insure they are tight.
- \*\*Note\*\*It may be necessary to push the top front edge of the external enclosure up slightly while installing it.
- With the longest distance to the mounting slots towards the rear, slide the cover back over the enclosure chassis and install the 6 screws.



LARS

CATEGORY F USA Activity -(a)Contract and Warranty W (b) IN-DEC Contract K Hardware Segment Code 090 Non Contract/Non Warranty F (c)RTD/Off-site Agreement F Product Line 031 DEC Option 2R-RZREA-AA Type of Call M Action Taken D Fail Area-Module-FCO-Comments 2R-RZREA-F001 Material Used EQ-01595-01

- (a) Warranty Optimum, Warranty Standard and Warranty Basic (on-site) Agreements.
- (b) Applies to INDEC AREA ONLY Warranty Optimum, Warranty Standard and Warranty Basic (on-site) Agreements.
- (c) RTD=Return to Digital or Off-site Agreements; If Field Engineer On-site, use Activity Code "F".

\^ RZREA \\RZREA \\2R-RZREA \\MITCHELL \\1990 \\DEC \\FCO\_DOCS