

# FMUX03

**E1/T1 DSU/CSU Digital  
Access Units**

STANDALONE TYPE

Fiber Optical  
E1/T1 Multiplexer

# INSTALLATION and OPERATION MANUAL

---

## Table of content

Chapter 1	Introduction.....	
	1-1 Functional Description.....	1
	1-2 Applications of FMUX03.....	2
	1-3 FMUX03 Technical Specification.....	3
	1-4 FMUX03 Ordering Information.....	6
Chapter 2	Installation.....	
	2-1 Description.....	7
	2-2 Unpacking.....	7
	2-3 Site Requirements.....	7
	2-4 Site Selection.....	8
	2-5 DC or AC Electrical Outlet Connection.....	8
Chapter 3	Operating Instructions.....	
	3-1 Front Panel.....	9
	3-2 Front Panel Control and LED Indicator Functions.....	10
	3-3 Menu Tree.....	12
Chapter 4	Operating and Setup Instructions.....	
	4-1 Profile.....	15
	4-2 E1 Configuration.....	15
	4-3 Trunk Link Signal.....	15
	4-4 Optical Module Manual Switch .....	15
	4-5 Craft Port Operation.....	15
	4-6 Connect and setup the craft port.....	16
	4-7 Operating From The Craft Port.....	16
Chapter 5	Diagnostics and Loopback Functions.....	
	5-1 General.....	41
	5-2 For E1 Tributary.....	41
Appendix	A-1. DB25 Pin Assignment for Tributary E1 Line Connection	1
	A-2. Pin Assignment for Tributary E1 Pad	1
	A-3. Alarm	2

# Chapter 1 Introduction

## 1-1 Functional Description


The CTC Union's FMUX03 is a fiber optical multiplexer that integrates 4/8/16 channels of E1 signal into a single optical data stream. It extends the transmission distance up to 80 kilometer. With the optional secondary optical link, FMUX03 provides 1+1 optical line protection. In addition, FMUX03 also provides the standard SNMP interface for Network Management, using Ethernet and PPP ports to connect to central office. User can monitor the FMUX03 through built-in In-band operation channel to reach a remote terminal. Moreover, FMUX03 simplifies testing and maintenance with order wire, allowing communication between local and remote maintenance crews. The FMUX03 provides the telecommunication company a multipurpose and easy to use high quality fiber optics multiplexer.

- ✧ The use of FMUX03 with the Smart Agent network interface for ease of network connectivity.
- ✧ Provides both 10/100 Base-T and PPP interface to connect SNMP Network Management center interface system.
- ✧ Optional secondary fiber link offers 1+1 line auto protection to insure network quality and efficiency.
- ✧ In-band operation channel provides the ability to configure, test, and monitor system status and alarm from both local and remote terminal. FMUX03 offers real-time monitoring of the transmission quality to meet the demands of high quality communication.
- ✧ E1 signal control calculates error in Path and Line
- ✧ The fiber optical interface of E1 communication system complies with the requirement of ITU-T regulatory standards.
- ✧ Order wire to assist with remote maintenance, configuration, and testing
- ✧ Provides the parity error count for optical interface performance monitoring.
- ✧ Operating from dual AC /DC(selectable) power module (co-exist on FMUX03), backup power supply is available.
- ✧ Mountable on either 19-inch or 23-inch rack.


## 1-2 Applications of FMUX03

FMUX03 is mainly used to extend the transmission distance of E1 signal by multiplexing four individual E1 channels into a single optical data stream. As illustrated below, there are three main applications for the use of FMUX03:

- Application 1: FMUX03 integrates 4/8/16 E1 channels into a single optical data stream.
- Application 2: FMUX03 can connect rDSLAM to a remote Central Office
- Application 3: FMUX03 can connect a Base Station (BS) to a Base Station Control (BSC).

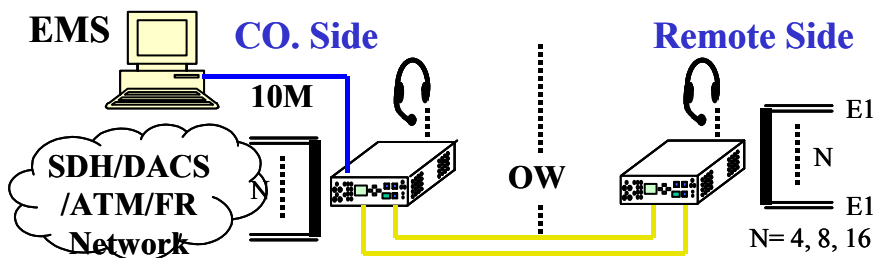

Application 1

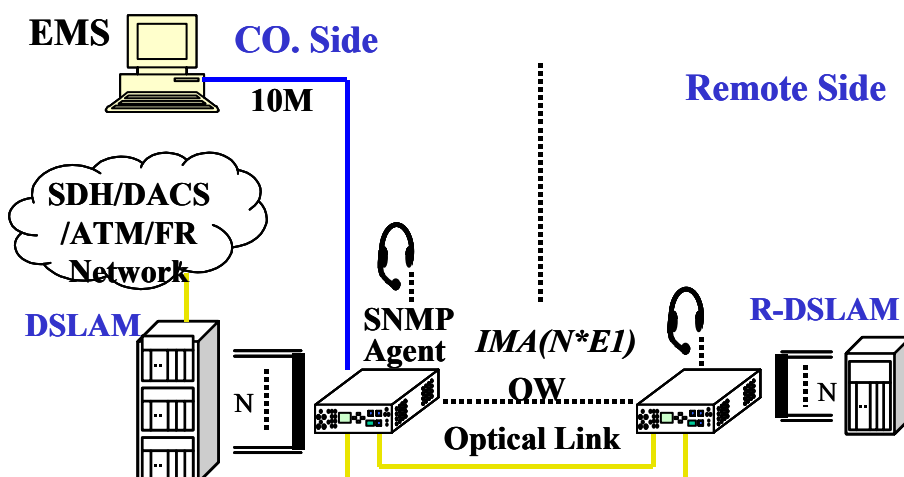

Application 2

## 1-3 FMUX03 Technical Specifications

### ◆ E1 Interface

- Channel Capacity: 4/8/16 channels
- Bit Rate: 2.048Mbps +/- 50ppm
- Line Code: HDB3/AMI
- Impedance: Balanced 120 $\Omega$  or Unbalanced 75 $\Omega$
- Electrical Interface: Conform with international standards ITU-T G.703
- Jitter Tolerance: Conform with international standards ITU-T G.823
- Jitter Transfer: Conform with international standards ITU-T G.742
- Test Load Impedance: Balanced 120 +/- 5%  $\Omega$  resistive or Unbalanced 75 +/- 5%  $\Omega$  resistive
  - Pulse Shape: Conform with ITU-T G.703 standards
  - Nominal peak voltage of mark (pulse): +/- 3.0 Volts
  - Nominal voltage of a space (no pulse): +/- 0.3 Volts
  - Ratio of the amplitudes of positive and negative pulses at the nominal half amplitude: 0.95 - 1.05
  - Ratio of the widths of positive and negative pulses at the nominal half amplitude: 0.95 - 1.05
  - Nominal Pulse Width: 244ns
- The digital signal presented at the input port shall be as defined above but modified by the characteristic of the interconnecting pair. The attenuation of this pair shall be assumed to follow a  $\sqrt{f}$  law and the loss at the frequency of 1024 kHz shall be in the range of 0 to 6 dB.
- The minimum values for Return Loss is listed below:

Frequency (kHz)	Min. Return Loss Value (dB)
51 ~ 102	12
102 ~ 2048	18
2048 ~ 3072	14

Jitter generation: The jitter of the E1 output signal in the absence of input jitter shall not exceed the following limits in both bands simultaneously. Jitter output should meet the requirement after FMUX03 performs the loopback test without jitter for E1 input signal.

- Connector Type: DB-25 female connector

**◆ Optical Link**

- Wavelength: 850 , 1310 or 1550 nm MLM Laser diode
- Number of Optical Link : 2 (working and protection link)
- Output Power:
  - > -12dBm at 62.5/125 (850 nm Laser)
  - > -12dBm at 9/125 (1310 nm Laser)
  - > -12dBm at 9/125(1550 nm Laser)
- Receiver Sensitivity:
  - > 0dB (Laser 850nm)
  - > -32dBm (Laser 1310 nm or 1550 nm)
- System Gain:
  - > 12-14dB (Laser 850nm)
  - > 20-30dB (Laser 1310nm or 1550nm)
- Fiber type: Single Mode (9/125um) or Multi-Mode (62.5/125um)
- Connectors: FC/PC , SC or ST

**◆ Alarm Detection and Indication****● Tributary Interface**

- LOS (Loss of Signal): The loss of E1 signal
- AIS (Alarm Indication Signal): Alarm indicator

**● Optical Interface**

- LOS (Loss of Signal) : The loss of optics signal
- LCK (Lock): Prevent switching to protect line
- RDI (Remote Defect Indication): Remote alarm
- Laser On: Laser On indicator
- System Power and Control Module: Normal/failure detection

**● Alarm Connector**

- DB-9 female connector
- Connect to an external BUZZER to receive visible and audible alarm.

**◆ Diagnostic capabilities**

- E1 Tributary: Local Loopback, Remote Loopback, and Request Remote Loopback.
- Trunk Link: Local Loopback and Remote Loopback
- ACO: Alarm cut off
- RST: Reset button

### ◆ Configuration

- Use the 3 control buttons and the LCD front panel to configure and monitor the system
- Craft port with DCE appearance
  - Bits per second (baud): 9600bps
  - Parity: None
  - Data Bits: 8 bits
  - Stop Bit: 1  
(VT-100 or Emulation Terminal)

### ◆ Power

- DC: -36V ~ -72V
- AC: 90V ~ 288V(47Hz ~ 63Hz)

### ◆ Physical Specifications

- FMUX03 Dimensions

	Depth	Width	Height
FMUX03/4	220mm	285mm	44.5mm
FMUX03/8/16	440mm	285mm	44.5mm

- Optical Link: FC/PC or ST, Electrical Link: DB-25 female connector
- Order Wire: Microphone and headset
- Network Management Center Interface: RJ-45 and DB-9 connector
- Alarm Connector: DB-9 connector


### ◆ Environment

- Operating Temperature: 0 ~ 40°C Indoor Version  
0 ~ 60°C Outdoor Version  
-25 ~ 70°C Storage
- Humidity: 5 ~ 95%
- EMI: Comply with CISPR 22 standards A(EN55022) and FCC Part 15 rules.
- EMS: Comply with EN55082-2 standards
- Safety: Complies with EN60950 standards

### 1-4 FMUX03 Ordering Information

Options for Ordering Information

***FMUX03-X XX-XXXX X-X-XX-X***

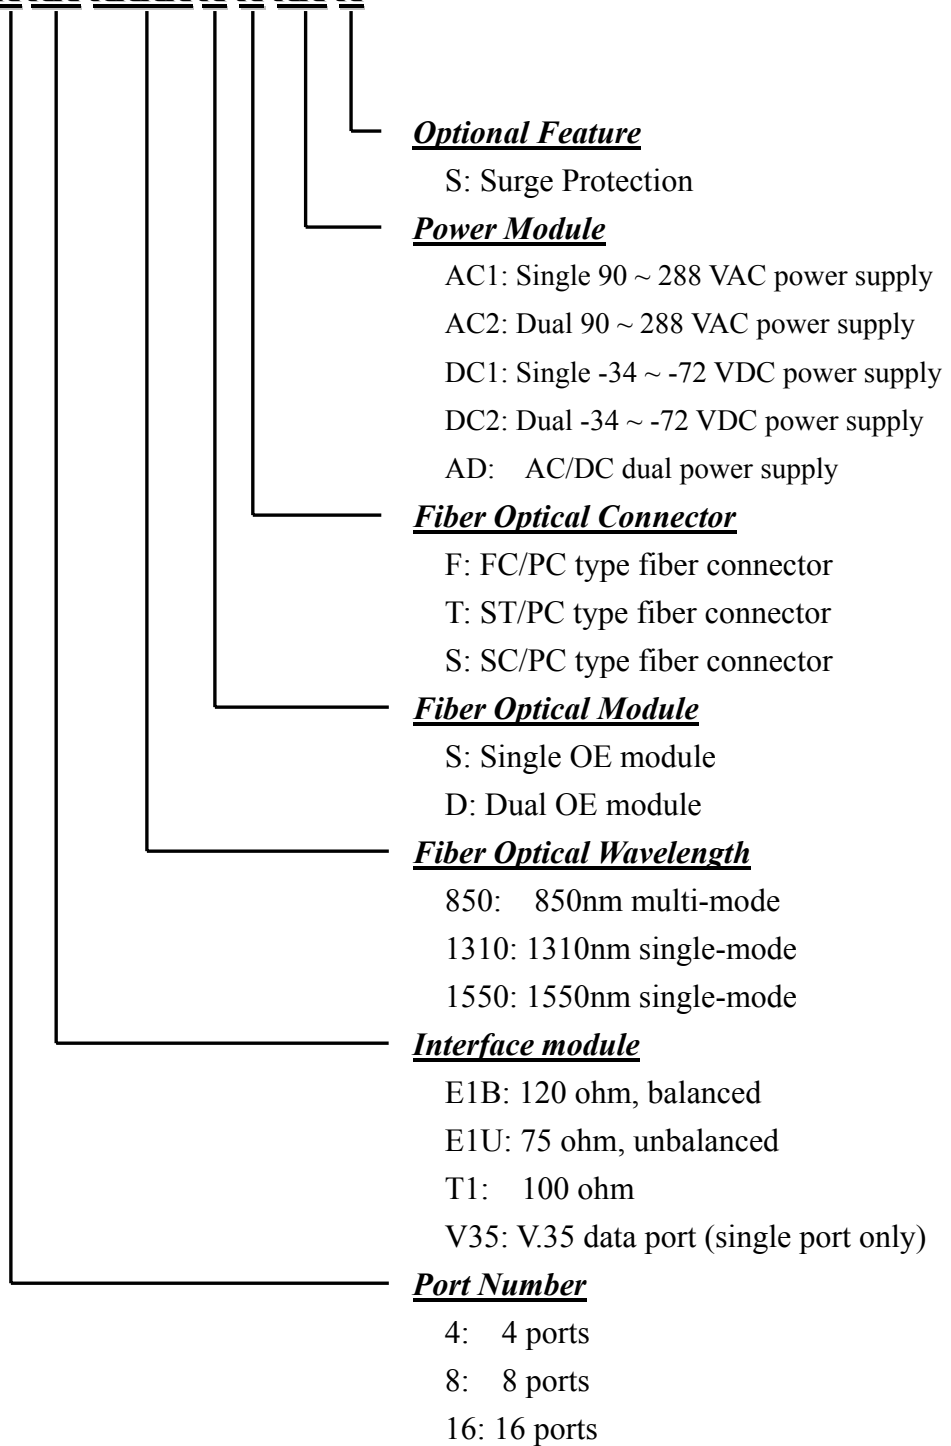



## Chapter 2 - Installation

### 2-1 Description

This chapter provides the information needed to install FMUX03. It is important to follow the installation instruction to insure normal operation of the system and also to prevent damage due to human error.

### 2-2 Unpacking

If there is a possibility for future relocation of the FMUX03 unit, please save the cartons and protection packaging material. The following items are shipped with your FMUX03:

- One FMUX03 User's Manual
- One FMUX03 Unit
- Depends on what was ordered, either DB-25 wire wrapped adaptor or DB-25 Mini Terminal Block

Please carefully unpack and inspect the unit and accessories for damaged and missing parts. Contact our nearest sales representative or our company directly if you suspect any damaged or missing parts. Improper handling during shipment may cause early failure.

### 2-3 Site Requirements

The FCC requires telecommunication equipment to withstand electrical surge that may result from lightning strikes. FMUX03 has been tested and found to comply with the FCC requirement. Users should follow the precaution below to insure the safety and minimize the risk of damage to the equipment:

- Make sure that the power outlet is properly grounded. Please refer to article 250 of the National Electrical Code (NEC) Handbook.
- Proper grounding should include a minimum of:
  - 1) A grounded rod buried outside the building at least 8 feet (2.44 meters) deep.
  - 2) It is preferred that the building uses metal water pipe and cooper connector at the joint.
  - 2) Any device connected to FMUX03 either directly or indirectly should use the same set of power outlet.

### **2-4 Site Selection**

For best performance, install the FMUX03 within 50 feet (656 meters) from the data terminal equipment and 6 feet (1.83 meters) from the AC power outlet. To allow easy access to the equipment, leave at least 36 inches (90 cm) clearance in front and at least 4 inches (10.2 cm) at the rear.

To avoid overheating, leave at least 1 inch (2.5 cm) on either side of FMUX03. Also, do not stack another equipment on top of FMUX03.

### **2-5 AC or DC Electrical Outlet Connection**

For safety and to prevent damage to FMUX03, make sure that the power requirement matches those of your electric outlet. Connect power to FMUX03 and power on the equipment.


## Chapter 3 – Operating Instructions

### 3-1 Front Panel




There are four parts to the front panel of FMUX03:


- (1) Fiber Optics Connectors and Indicators: Two sets of optics transmit/receive and indicators, one working and another as protect. Notifies user of a problem such as LOS (Loss of Signal) and Laser LED (LSR).
- (2) Alarm LED Display: Notifies users of a problem such as LOS (Loss of Signal) and AIS (Alarm Indication Signal) for each of the four E1 channels.
- (3) LCD Control Buttons: The three buttons, ▲, ▼, ► and are used for system configuration and for the loopback test.
- (4) Order Wire: User can connect FMUX03 to a headset and microphone for ease to remote configuration and testing.

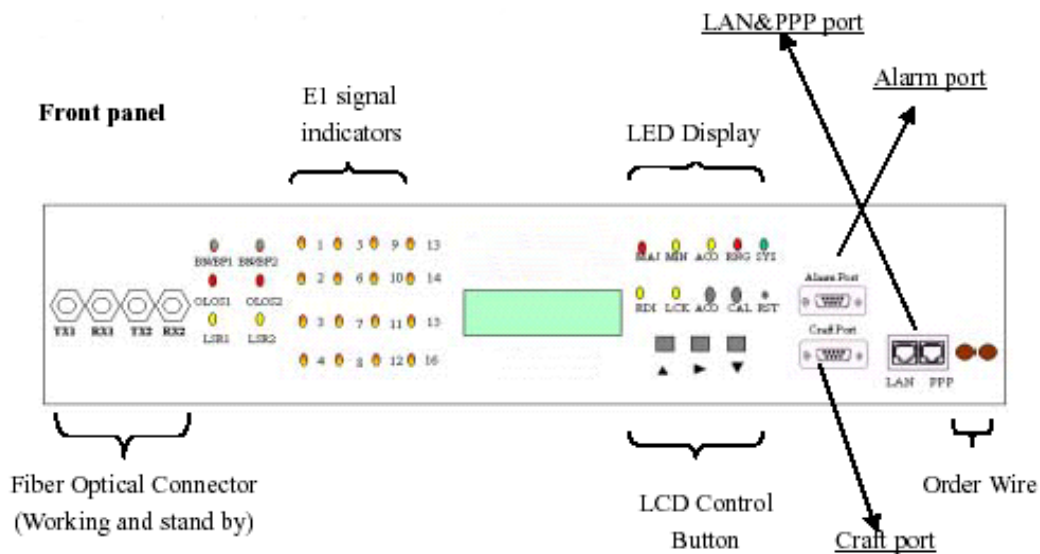Each of the LED indicators is described below in detail:



**3-2 Front Panel Control and LED Indicator Functions ( reference appendix )**


#	Control or LED Indicator	Function
1	<b>OLOS1</b> <b>OLOS2</b> <b>LSR1(OLB)</b> <b>LSR2(ORB)</b>	Red light when there is a loss of input signal Orange light when there is a loss of output signal Yellow light signals an alarm in Laser sending out energy normally When yellow light flash, there is a optical LL When yellow light flash, there is a optical RL
2	<b>LOS(RLB)</b> <b>AIS(LLB)</b>	Red light when there is a Loss of Signal (LOS) Yellow light when received an Alarm Indication Signal (AIS) Red light flash when there is a LL of E1 signal (AIS)
3	<b>MAJ</b>	Red light when there is a Major Alarm present
4	<b>MIN</b>	Yellow light when there is a Minor Alarm present
5	<b>RNG</b>	Red light when connected to the remote terminal.
6	<b>SYS</b>	System normal or System failure
7	<b>RDI</b>	Remote Defect Indication; Indicates a failure in the remote terminal
8	<b>LCK</b>	System Lock; Locks the system if switched to protect line 6 times within 10 minutes
9	<b>ACO</b>	Alarm Cut Off; Yellow lights when the ACO button is pressed to manually disable the audible alarm when a problem occurs. If any newer alarm is reported after the ACO button has been pressed, the external alarm will activate again.
10	<b>CAL</b>	Order wire
11	<b>RST</b>	Restart the system
12	<b>BN/BF1</b> <b>BN/BF2</b>	Expand card normal or failure
13	  	These three buttons serve as the control and configure FMUX03

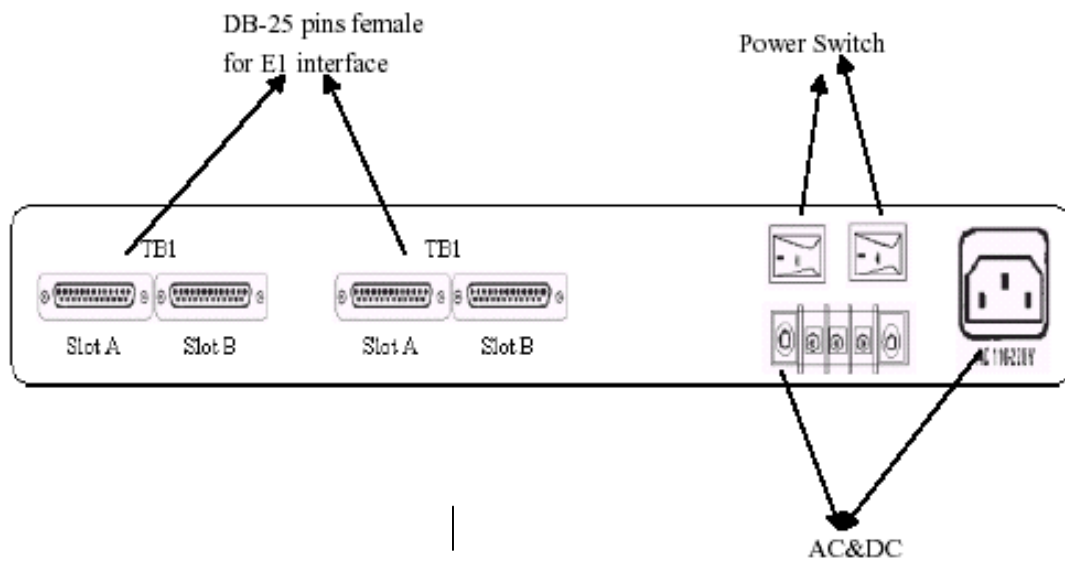


### Rear panel

- I. E1 I/O: DB25 female connector for input/output of E1 signal
- II. Alarm: DB9 female connector; Connect to an external BUZZER to receive visible and audible alarm.
- III. Terminal Connector: LAN/PPP connector to remote terminal using RJ45.
- IV. Power Switches: On/Off switch for FMUX03
- V. There are 5 different power supply combinations with the DC/AC dual module power supply: AC only, DC only, dual AC, dual DC, both AC and DC  
(Reference to Order Information)

### 3-3 Menu Tree

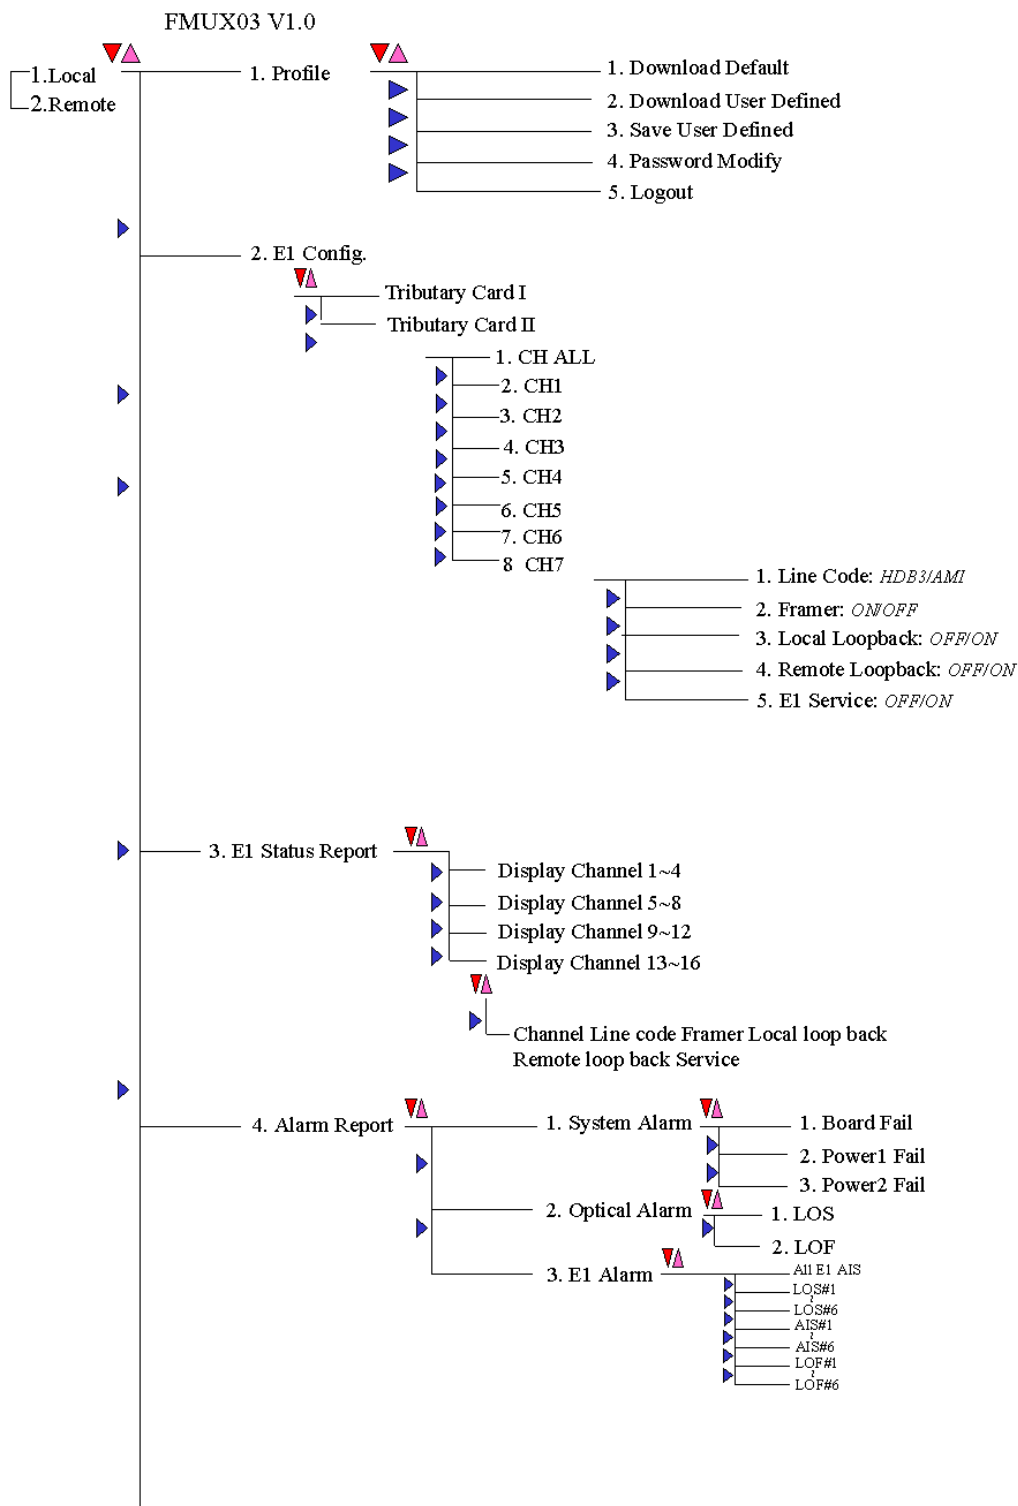

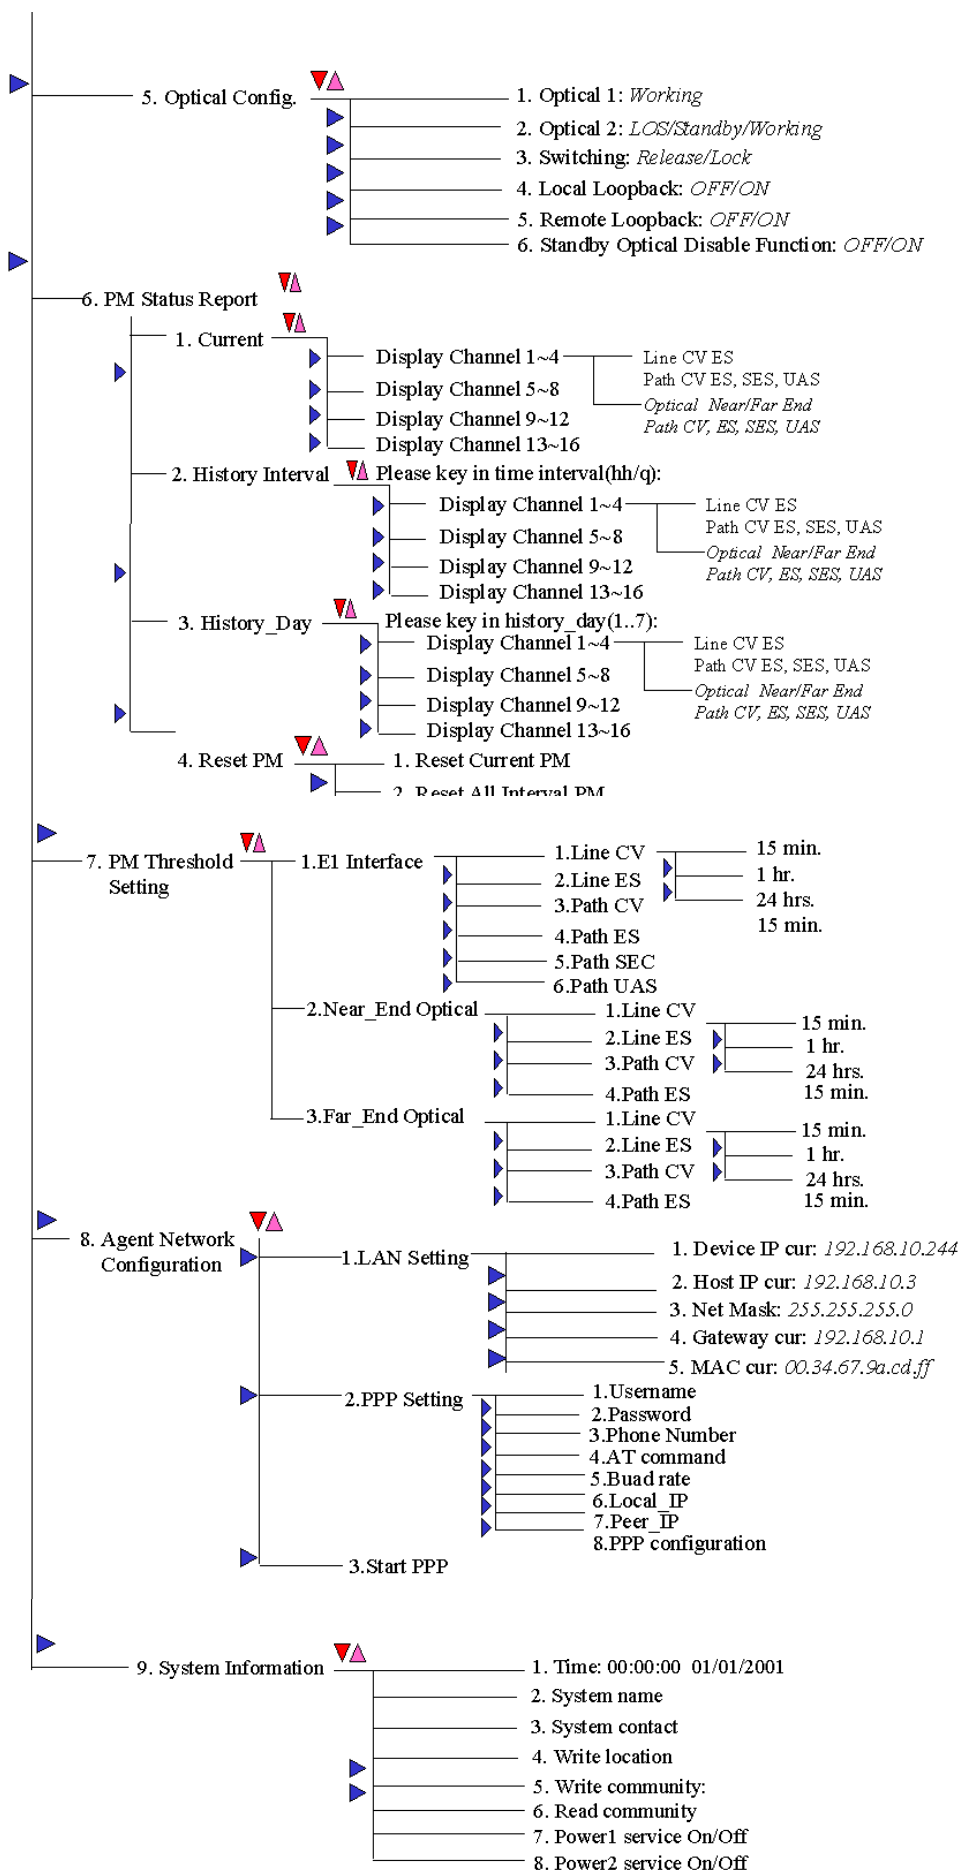

## Chapter 4 - Operating and Setup Instructions

FMUX03 provides easy to use LCD control for easy configuration, maintenance, and testing. Button functions are as follows:

- ▶ Menu select
- ▲ Go back to the upper level of the menu
- ▼ “Enter” key to go to a sub-menu

### 4-1 Profile

Download and Save Profiles:

If the user selects the factory default profile, the system will restart before downloading the factory default profile.

User can configure E1 Line Code(HDB3/AMI), and Loopback test. After selecting the “user\_defined” option, the system will automatically restart. The system will then download the user custom profile.

#### Modify Password:

To prevent unauthorized login, user must enter a set of password to login to the system.

The password for FMUX03 is a combination of the buttons below, from left to right:

<b>Button</b>	Up ↑	Right →	Down ∨	Up ↑
<b>Password</b>	U	R	D	U

User can change the password using this function after verifying the current password.

Password can also be changed from the craft terminal using the same procedure.

Note that the password for operating the craft can be different from LCD menu driven is needed.

Note: In case the user forgets the login password, the universal password for FMUX03 “1234” can be used.



## **4-2 E1 Configuration**

There are two types of loopback tests for E1 configuration: Local Loopback and Remote Loopback. To perform the test on an individual E1 channel or all channels, select the function CH#(n) or CH#All.

Note: Refer to Chapter 5 for detailed information on Diagnostics and Loopback Functions.

## **4-3 Trunk Link Signal**

There are two types of loopback tests for the Trunk Link Signal: Local Loopback and Remote Loopback.

Note: Refer to Chapter 5 for detailed information on Diagnostics and Loopback Functions.

O/E Module status can be obtained from this current menu:

- Under normal operation, LCD display shows that the working O/E module as “Working” and the backup O/E Module as ”Standby.”
- If FMUX03 detects a Loss of Signal, the LOS light will be lit and the LCD display will show that there is a Loss of Signal.

## **4-4 Optical Module Manual Switch**

Users can manually switch between O/E module 1 and O/E module 2 if a secondary O/E module is installed on the FMUX03.

## **4-5 Craft Port Operation**

Craft port allows user to monitor and configure FMUX03 through a remote terminal emulator, such as VT100.

#### **4-6 How to connect and setup the craft port**

- Connect the craft port to a remote terminal using DB-9 cable.
- VT100 terminal settings:
  - Bit Rate: 9600bps
  - Data Bit: 8 bit
  - Parity: No Parity
  - Stop Bit: 1 Stop bit

Set the emulation mode to "VT100" or "Auto Detect".

#### **4-7 Operating From the Craft Port**

After properly connecting the craft port to a terminal, the system will prompt the user for password. The universal password is "1234."

The figure below is a screenshot of the login terminal screen:

---

```
E1 FOM V1.0 R01
Key in Password: _
```

User can access a function by typing its corresponding number into the remote terminal. To go back to the previous menu, press the ‘Backspace’ key. Refer to the Menu Tree for navigation.

After entering the remote terminal screen, user can select Local Side operation and Remote Side operation for configuration, loopback, and monitoring of the FMUX03.

**Local/Remote**

---

```
E1 FOM V1.0 R01

1. Local Side
2. Remote Side
```

```
      Please select the item or Backspace to previous menu: _
=====
Local Alarm Report
Sys:      O/E1:      CH1:      CH2:
          O/E2:      CH3:      CH4:
Remote Alarm Report
Sys:      O/E1:      CH1:      CH2:
          O/E2:      CH3:      CH4:
```

---

After entering the main menu, select of the nine functions:

1. Profile
2. E1 Configuration
3. E1 Status Report
4. Alarm Report
5. Optical Configuration
6. PM Status Report
7. PM Threshold Setting
8. Agent Network Configuration
9. System Information

**Main**

Main Menu  
Near\_end Setting

1. Profile
2. E1 Configuration
3. E1 Status Report
4. Alarm Report
5. Optical Configuration
6. PM Status Report
7. PM Threshold setting
8. Agent Network Configuration
9. System Information

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys: P2_F      O/E1:LOS      CH1:LOS      CH2:AIS
              O/E2:LOS      CH3:AIS      CH4:AIS

Remote Alarm Report
Sys:          O/E1:      CH1:      CH2:
              O/E2:      CH3:      CH4:
    
```

**E1 Configuraton**

E1 Configuration  
Local Side Setting

1. Tributary I
2. Tributary II

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

E1 Configuration Tributary I  
Local Side Setting

1. #Ch All
2. #Ch 1
3. #Ch 2
4. #Ch 3
5. #Ch 4
6. #Ch 5
7. #Ch 6
8. #Ch 7
9. #Ch 8

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

```

#Ch All Configuration Tributary I
Local Side Setting

1. Line code : HDB3
2. Framer : ON
3. Local Loopback: OFF
4. Remote Loopback: OFF
5. E1 Service: ON

Please select the item or Backspace to previous menu:_
=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

```

#Ch 1 Configuration Tributary I
Local Side Setting

1. Line code : HDB3
2. Framer : ON
3. Local Loopback: OFF
4. Remote Loopback: OFF
5. E1 Service: ON

Please select the item or Backspace to previous menu:
=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

E1 Configuration Tributary II  
Local Side Setting

1. #Ch All
2. #Ch 9
3. #Ch 10
4. #Ch 11
5. #Ch 12
6. #Ch 13
7. #Ch 14
8. #Ch 15
9. #Ch 16

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

#Ch All Configuration Tributary II  
Local Side Setting

1. Line code : HDB3
2. Framer : ON
3. Local Loopback: OFF
4. Remote Loopback: OFF
5. E1 Service: ON

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

#Ch 1 Configuration Tributary II  
Local Side Setting

1. Line code : HDB3
2. Framer : ON
3. Local Loopback: OFF
4. Remote Loopback: OFF
5. E1 Service: ON

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

**E1 Status**

E1 Status Report  
Local Side Setting

1. Display Channel 1~4
2. Display Channel 5~8
3. Display Channel 9~12
4. Display Channel 13~16

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```



E1 Status Report

Channel	Linecode	Framer	Local Loopback	Remote Loopback	Service
CH#1	HDB3	ON	OFF	OFF	ON
CH#2	HDB3	ON	OFF	OFF	ON
CH#3	HDB3	ON	OFF	OFF	ON
CH#4	HDB3	ON	OFF	OFF	ON

Please press any key to previous menu: \_

Local Alarm Report

Sys:           O/E1:Working           Tributary I:Normal  
                   O/E2:Standby       Tributary II:Normal

Remote Alarm Report

Sys:           O/E1:Working           Tributary I:Normal  
                   O/E2:Standby       Tributary II:Normal

E1 Status Report

Channel	Linecode	Framer	Local Loopback	Remote Loopback	Service
CH#5	HDB3	ON	OFF	OFF	ON
CH#6	HDB3	ON	OFF	OFF	ON
CH#7	HDB3	ON	OFF	OFF	ON
CH#8	HDB3	ON	OFF	OFF	ON

Please press any key to previous menu:

Local Alarm Report

Sys:           O/E1:Working           Tributary I:Normal  
                   O/E2:Standby       Tributary II:Normal

Remote Alarm Report

Sys:           O/E1:Working           Tributary I:Normal  
                   O/E2:Standby       Tributary II:Normal

E1 Status Report

Channel	Linecode	Framer	Local Loopback	Remote Loopback	Service
CH#9	HDB3	ON	OFF	OFF	ON
CH#10	HDB3	ON	OFF	OFF	ON
CH#11	HDB3	ON	OFF	OFF	ON
CH#12	HDB3	ON	OFF	OFF	ON

Please press any key to previous menu: \_

Local Alarm Report

Sys:           O/E1:Working           Tributary I:Normal  
                   O/E2:Standby           Tributary II:Normal

Remote Alarm Report

Sys:           O/E1:Working           Tributary I:Normal  
                   O/E2:Standby           Tributary II:Normal

E1 Status Report

Channel	Linecode	Framer	Local Loopback	Remote Loopback	Service
CH#13	HDB3	ON	OFF	OFF	ON
CH#14	HDB3	ON	OFF	OFF	ON
CH#15	HDB3	ON	OFF	OFF	ON
CH#16	HDB3	ON	OFF	OFF	ON

Please press any key to previous menu: \_

Local Alarm Report

Sys:           O/E1:Working           Tributary I:Normal  
                   O/E2:Standby           Tributary II:Normal

Remote Alarm Report

Sys:           O/E1:Working           Tributary I:Normal  
                   O/E2:Standby           Tributary II:Normal

**Alarm report**

Alarm Report  
Local Side Setting

E_Code	Alarm
32	Ch #1 AIS
33	Ch #2 AIS
34	Ch #3 AIS
35	Ch #4 AIS
36	Ch #5 AIS
37	Ch #6 AIS
38	Ch #7 AIS
39	Ch #8 AIS

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I: AIS
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I: LOS
              O/E2:Standby     Tributary II:Normal
    
```

**Optical configuration**

Optical Configuration  
Local Side Setting

1. Optical 1 : Working
2. Optical 2 : Standby
3. Switching : Release
4. Local Loopback : OFF
5. Remote Loopback: OFF

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

**PM report**

PM Status Report  
Local Side Setting

1. Current
2. History\_interval
3. History\_day
4. Reset PM

Please select the item or Backspace to previous menu:

```
=====
Local Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
```

PM Current Report  
Local Side Setting

1. Display Channel 1~4
2. Display Channel 5~8
3. Display Channel 9~12
4. Display Channel 13~16

Please select the item or Backspace to previous menu:

```
=====
Local Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
```

```

                PM Current Report
      Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 1      0       0       0       0       0       0
#Ch 2      0       0       0       0       0       0
#Ch 3      0       0       0       0       0       0
#Ch 4      0       0       0       0       0       0
Optical Near_End           0       0       0       0
Optical Far_End           0       0       0       0
                Please press Backspace to previous menu:_
=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

```

                PM Current Report
      Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 5      0       0       0       0       0       0
#Ch 6      0       0       0       0       0       0
#Ch 7      0       0       0       0       0       0
#Ch 8      0       0       0       0       0       0
Optical Near_End           0       0       0       0
Optical Far_End           0       0       0       0
                Please press Backspace to previous menu:_
=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

```

                                PM Current Report
      Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 9         0         0         0         0         0         0
#Ch 10        0         0         0         0         0         0
#Ch 11        0         0         0         0         0         0
#Ch 12        0         0         0         0         0         0
Optical Near_End           0         0         0         0
Optical Far_End            0         0         0         0
                                Please press Backspace to previous menu:
=====
Local Alarm Report
Sys:                O/E1:Working      Tributary I:Normal
                   O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:                O/E1:Working      Tributary I:Normal
                   O/E2:Standby     Tributary II:Normal

```

```

                                PM Current Report
      Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 13        0         0         0         0         0         0
#Ch 14        0         0         0         0         0         0
#Ch 15        0         0         0         0         0         0
#Ch 16        0         0         0         0         0         0
Optical Near_End           0         0         0         0
Optical Far_End            0         0         0         0
                                Please press Backspace to previous menu:
=====
Local Alarm Report
Sys:                O/E1:Working      Tributary I:Normal
                   O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:                O/E1:Working      Tributary I:Normal
                   O/E2:Standby     Tributary II:Normal

```

**PM history report**

PM History Report  
Local Side Setting

1. Display Channel 1~4
2. Display Channel 5~8
3. Display Channel 9~12
4. Display Channel 13~16

Please select the item or Backspace to previous menu:

```
=====
Local Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
```

PM History Report  
Local Side Setting

Please key in time interval (1..96):

Please select the item or Backspace to previous menu:

```
=====
Local Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
```

```

                                PM History Report
                                Interval==>1
Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 1     0         0         0         0         0         0
#Ch 2     0         0         0         0         0         0
#Ch 3     0         0         0         0         0         0
#Ch 4     0         0         0         0         0         0
Optical Near_end           0         0         0         0
Optical Far_end           0         0         0         0
Please press Backspace to previous menu:
=====
Local Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
    
```

```

                                PM History Report
                                Interval==>2
Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 5     0         0         0         0         0         0
#Ch 6     0         0         0         0         0         0
#Ch 7     0         0         0         0         0         0
#Ch 8     0         0         0         0         0         0
Optical Near_end           0         0         0         0
Optical Far_end           0         0         0         0
Please press Backspace to previous menu:
=====
Local Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
    
```



```

                PM History Report
                Interval==>3
    Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 9       0         0         0         0         0         0
#Ch 10      0         0         0         0         0         0
#Ch 11      0         0         0         0         0         0
#Ch 12      0         0         0         0         0         0
Optical Near_end           0         0         0         0
Optical Far_end            0         0         0         0
                Please press Backspace to previous menu:
=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

```

                PM History Report
                Interval==>4
    Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 13      0         0         0         0         0         0
#Ch 14      0         0         0         0         0         0
#Ch 15      0         0         0         0         0         0
#Ch 16      0         0         0         0         0         0
Optical Near_end           0         0         0         0
Optical Far_end            0         0         0         0
                Please press Backspace to previous menu:
=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

**PM Daily Report**

PM Day Report  
Local Side Setting

1. Display Channel 1~4
2. Display Channel 5~8
3. Display Channel 9~12
4. Display Channel 13~16

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

PM Day Report  
Local Side Setting

Please key in history\_day(1..7):

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:standby     Tributary II:Normal
    
```

```

                                PM Report 1 day(s) ago

Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 1     0         0         0         0         0         0
#Ch 2     0         0         0         0         0         0
#Ch 3     0         0         0         0         0         0
#Ch 4     0         0         0         0         0         0
Optical Near_End           0         0         0         0
Optical Far_End            0         0         0         0
Please press Backspace to previous menu:
=====
Local Alarm Report
Sys:           O/E1:Working      Tributary I:Normal
               O/E2:Standby    Tributary II:Normal
Remote Alarm Report
Sys:           O/E1:Working      Tributary I:Normal
               O/E2:Standby    Tributary II:Normal
    
```

```

                                PM Report 2 day(s) ago

Line CV   Line ES   Path CV   Path ES   Path SES   Path UAS
#Ch 5     0         0         0         0         0         0
#Ch 6     0         0         0         0         0         0
#Ch 7     0         0         0         0         0         0
#Ch 8     0         0         0         0         0         0
Optical Near_End           0         0         0         0
Optical Far_End            0         0         0         0
Please press Backspace to previous menu:
=====
Local Alarm Report
Sys:           O/E1:Working      Tributary I:Normal
               O/E2:Standby    Tributary II:Normal
Remote Alarm Report
Sys:           O/E1:Working      Tributary I:Normal
               O/E2:standby    Tributary II:Normal
    
```

PM Report 3 day(s) ago

	Line CV	Line ES	Path CV	Path ES	Path SES	Path UAS
#Ch 9	0	0	0	0	0	0
#Ch 10	0	0	0	0	0	0
#Ch 11	0	0	0	0	0	0
#Ch 12	0	0	0	0	0	0
Optical Near_End			0	0	0	0
Optical Far_End			0	0	0	0

Please press Backspace to previous menu: \_

=====

Local Alarm Report

Sys: O/E1:Working Tributary I:Normal  
 O/E2:Standby Tributary II:Normal

Remote Alarm Report

Sys: O/E1:Working Tributary I:Normal  
 O/E2:Standby Tributary II:Normal

PM Report 4 day(s) ago

	Line CV	Line ES	Path CV	Path ES	Path SES	Path UAS
#Ch 13	0	0	0	0	0	0
#Ch 14	0	0	0	0	0	0
#Ch 15	0	0	0	0	0	0
#Ch 16	0	0	0	0	0	0
Optical Near_End			0	0	0	0
Optical Far_End			0	0	0	0

Please press Backspace to previous menu: \_

=====

Local Alarm Report

Sys: O/E1:Working Tributary I:Normal  
 O/E2:Standby Tributary II:Normal

Remote Alarm Report

Sys: O/E1:Working Tributary I:Normal  
 O/E2:Standby Tributary II:Normal

**Reset PM**

PM Reset Menu  
Local Side Setting

1. Reset Current PM
2. Reset All Interval PM
3. Reset 7 days PM

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby      Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby      Tributary II:Normal
    
```

**PM threshold setting**

PM Threshold Setting  
Local Side Setting

1. E1 Interface
2. Near\_End Optical
3. Far\_End Optical

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

E1 Interface  
Local Side Setting

1. Line CV
2. Line ES
3. Path CV
4. Path ES
5. Path SES
6. Path UAS

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

```

                                E1 Interface Line CV
                                Local Side Setting

                                1. 15 mins   cur:9999
                                2. 1hr       cur:9999
                                3. 24hrs    cur:9999

                                Please select the item or Backspace to previous menu:
                                =====
Local Alarm Report
Sys:           O/E1:Working      Tributary I:Normal
               O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:           O/E1:Working      Tributary I:Normal
               O/E2:Standby     Tributary II:Normal
    
```

**Optical PM threshold setting**

```

                                Near_End Optical Interface
                                Local Side Setting

                                1. Path CV
                                2. Path ES
                                3. Path SES
                                4. Path UAS

                                Please select the item or Backspace to previous menu:
                                =====
Local Alarm Report
Sys:           O/E1:Working      Tributary I:Normal
               O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:           O/E1:Working      Tributary I:Normal
               O/E2:Standby     Tributary II:Normal
    
```

Far\_End Optical Interface  
Local Side Setting

1. Path CV
2. Path ES
3. Path SES
4. Path UAS

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

**Agent network configuration**

Agent Network Configuration  
Local Side Setting

1. LAN Setting
2. PPP Setting
3. Start PPP

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```



LAN Setting  
Local Side Setting

- 1. Device IP cur: 192.168.10.248
- 2. Host IP cur: 192.168.10.100
- 3. Net Mask cur: 255.255.255.0
- 4. Gateway cur: 192.168.10.1
- 5. MAC cur: 00.00.06.88.00.8C

Please select the item or Backspace to previous menu: \_

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

PPP Setting  
Local Side Setting

- 1. username :
- 2. password :
- 3. phone number:
- 4. AT Command :
- 5. Baud rate :
- 6. Local\_IP :
- 7. Peer\_IP :
- 8. PPP Config

Please select the item or Backspace to previous menu:

```

=====
Local Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:          O/E1:Working      Tributary I:Normal
              O/E2:Standby     Tributary II:Normal
    
```

**System information**System Information  
Local Side Setting

1.Time:0:39:25 3/16/1993  
2.System Name:SLFE80  
3.System Contact:Telways, Roger Tseng  
4.System Location:Taiwan, Taipei  
5.Write Community:private  
6.Read Community:public  
7.Power1 Service:ON  
8.Power2 Service:OFF

Please select the item or Backspace to previous menu:

```
=====
Local Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
Remote Alarm Report
Sys:      O/E1:Working      Tributary I:Normal
          O/E2:Standby     Tributary II:Normal
```

## Chapter 5 - Diagnostics and Loopback Functions

### 5-1 General Information

This chapter contains detailed information on the diagnostics and the loopback tests of the FMUX03 fiber optics transmission equipment. User can activate the loopback function to diagnose the full service.

### 5-2 Loopback Functions for E1 Tributary


There are two types of loopback functions for the E1 Module: Local Loopback and Remote Loopback. User can select whether to diagnose a specific channel or all channels under the “E1 Configurations” options.

Figures below illustrates the concepts of the loopback function:


- Local Side Loopback:

Local Side Loopback tests the path between local E1 and remote E1.


#### 1. E1 Local Loopback

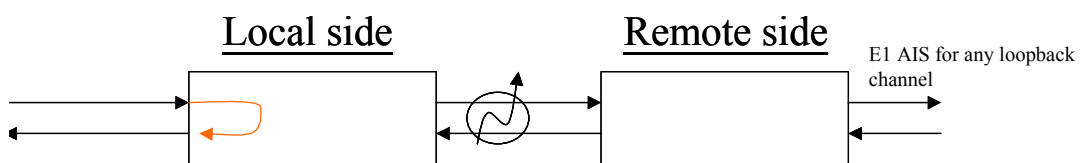


#### 2. E1 Remote Loopback

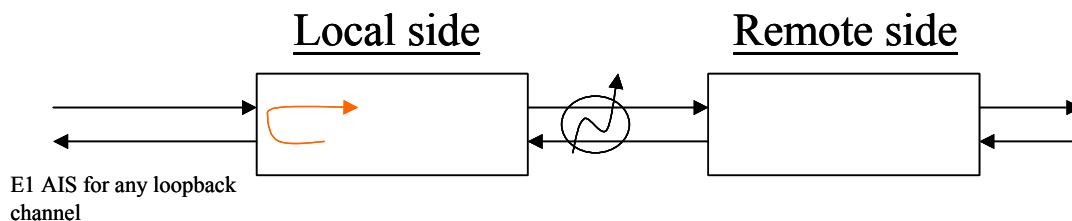

3. Optical Local Loopback

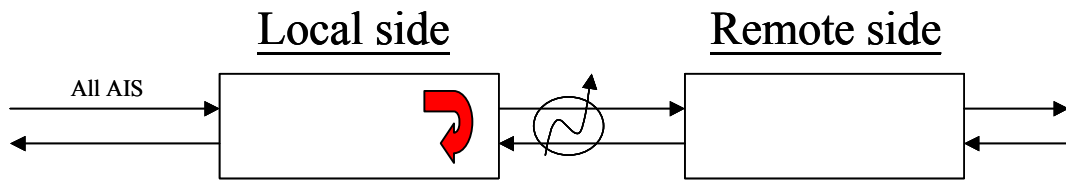


4. Optical Remote Loopback

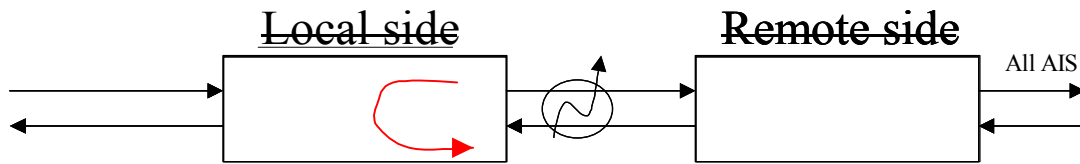


● Remote side:


1. E1 Local Loopback

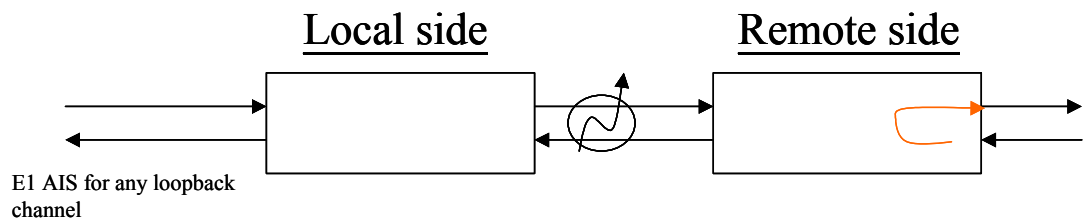


2. E1 Remote Loopback

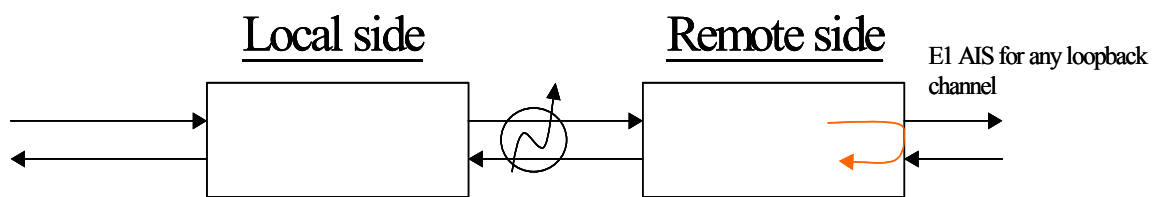


3. Optical Remote Loopback

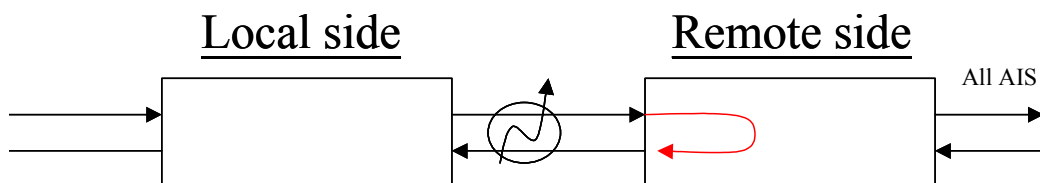


#### 4. Optical Local Loopback

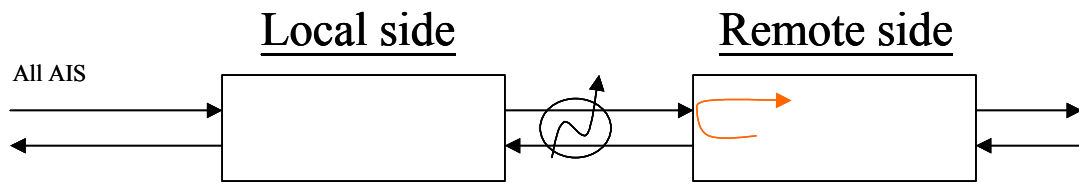

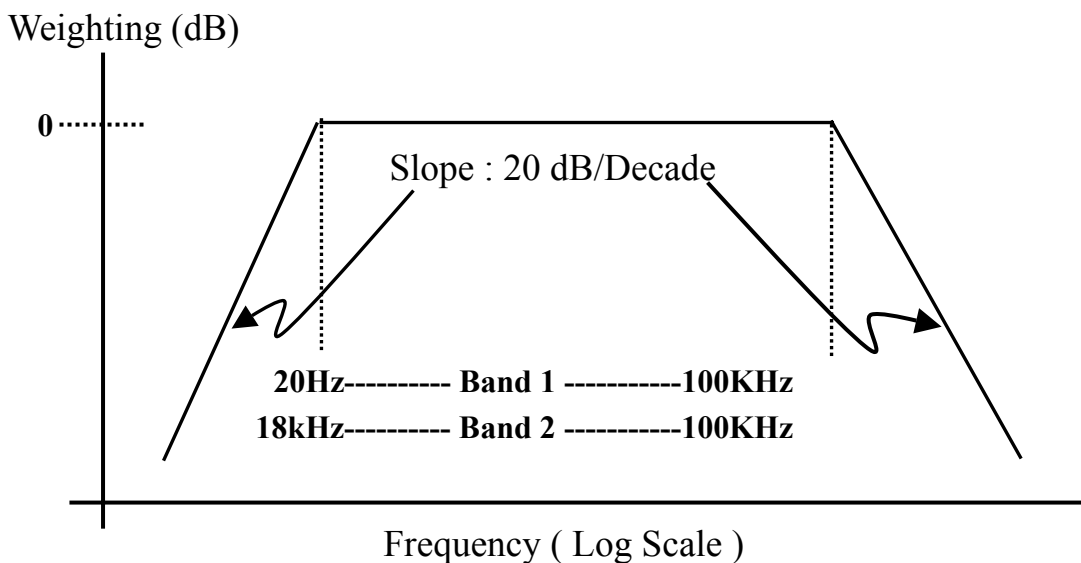

**Fig 1.Frequency characteristic weighting function for E1 jitter specification**

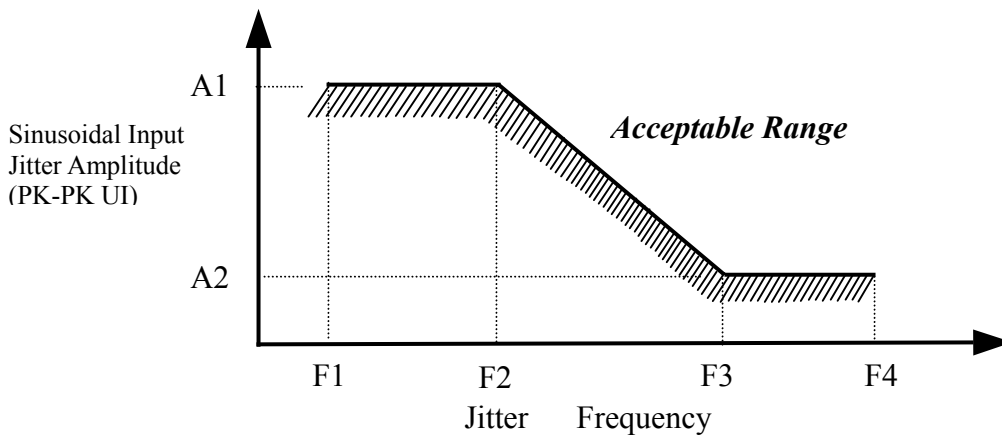

Digital rate (kbit/s)	Peak-to-Peak Amplitude unit Interval		Frequency (Hz)				Pseudo-Random Test Signal ITU-T Q.151
	A1	A2	F1	F2	F3	F4	
E1	1.5	0.2	20	2.4k	18k	100k	2 <sup>15</sup> -1

**Fig 2. Input Jitter Tolerance at E1 Interface**


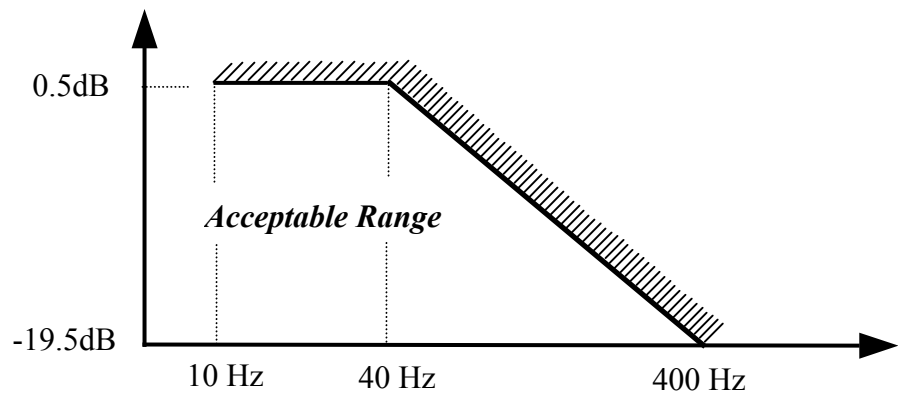


Fig 3. E1 Desynchronize Jitter Transfer

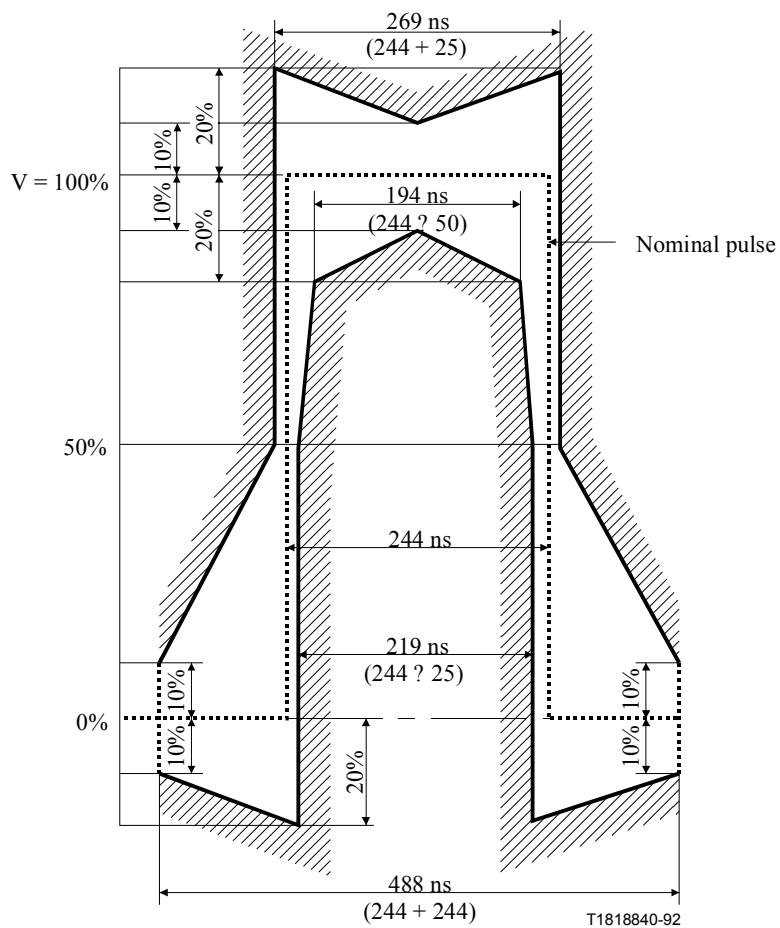


NOTE ? V corresponds to the nominal peak value.


Fig 4. Mask Of the pulse at the E1 interface

# APPENDIX

## A-1 DB25 Pin Assignment for Tributary E1 Line Connection

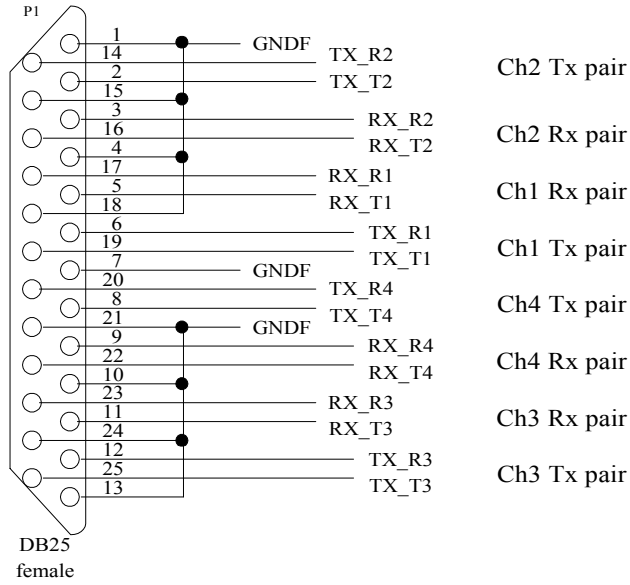

## A-2 Pin Assignment for Tributary E1 pad

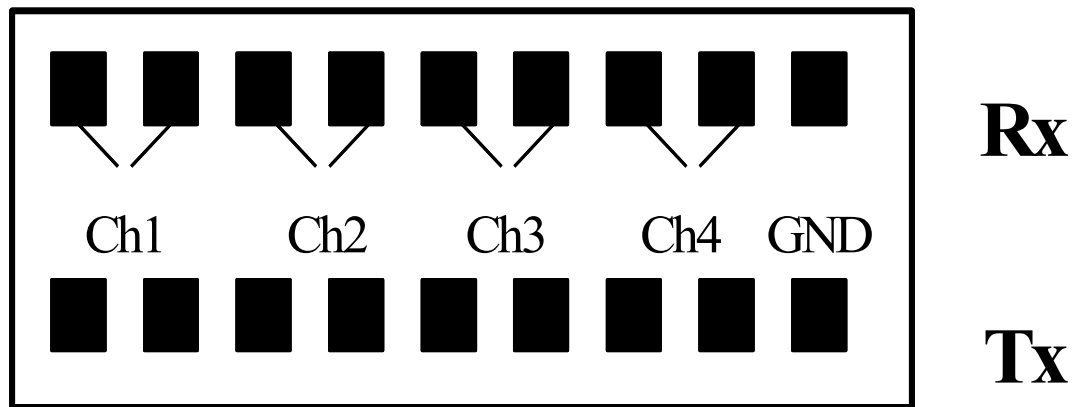



**A-3 Alarm**

<b>Alarm Status</b>		<b>LED sign</b>	<b>MAJ</b>	<b>MIN</b>
Single OE	OLOSW	<b>OLOS1</b>	*	
	OLOSP	<b>OLOS2</b>	*	
Dual OE	OLOSW	<b>OLOS1</b>		*
	OLOSP	<b>OLOS2</b>		*
	OLOSW & OLOSP	<b>OLOS1, OLOS2</b>	*	
Dual Power	PWRF1			*
	PWRF2			
ELOS1		<b>ELOS</b>	*	
ELOS2				
ELOS3				
ELOS4				
EAIS1		<b>AIS</b>		*
EAIS2				
EAIS3				
EAIS4				
OAIS				
ELOF1			*	
ELOF2				
ELOF3				
ELOF4				
OLOF				
LOC_8M		<b>SYS</b>	*	
LOC_2M				
LOC_8RM				
ERDI		<b>RDI</b>		*
ORDI				



## Fiber Optical Multiplexer Series

***CTC Union Technologies Co., Ltd.***

Far Eastern Edison Science and Technologies Center  
(Nei-Hu HI-TEC Park)

6F-3, Lane 360, Nei-Hu Road, Section 1

Nei-Hu, Taipei, Taiwan

Phone:(886) 2.2659.1021 (Rep) Fax:(886) 2.2799.1355

E-mail:<mailto:info@ctcu.com>

<http://www.ctcu.com>